


# INSTRUCTION MANUAL

## NT935 IR ETH

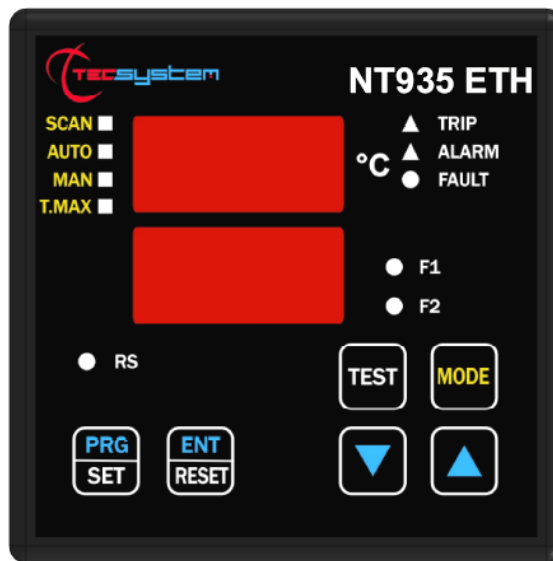

1MN0153 REV. 0



operates with ISO9001 certified quality system

**TECSYSTEM S.r.l.**  
20094 Corsico (MI)  
Tel.: +39-024581861  
Fax: +39-0248600783

<http://www.tecsystem.it>

R. 1.2 26/11/20

ENGLISH

“Translations of the original instructions”

## INTRODUCTION

First of all we wish to thank you for choosing a **TECSYSTEM** product. It is recommended to read this instruction manual carefully as to fully understand the use of the equipment and therefore to benefit of all its functions

ATTENTION! THIS MANUAL IS VALID AND COMPLETE FOR THE CONTROL UNIT NT935 IR ETH.

## CONTENTS

	PAGE
1) SAFETY REQUIREMENTS .....	4
2) ACCESSORIES .....	5
3) TECHNICAL SPECIFICATIONS .....	6
• TIR409 .....	—
• NT935 IR ETH .....	7
4) FRONT PANEL .....	9
• DISPLAY .....	10
• OPERATING PROGRAM CONTROL .....	—
• NOTES ON SCAN AND MAN FUNCTIONS .....	—
• LED TEST .....	—
• ALARM RELAY TEST .....	—
• ALARM RELAY SILENCING .....	—
5) ASSEMBLY .....	11
• TIR409 .....	—
• NT935 IR ETH .....	14
6) ELECTRICAL CONNECTIONS .....	15
• NT935 IR ETH BACK .....	—
• POWER SUPPLY .....	16
• ALARMS AND VENTILATION .....	—
• FAULT AND RESET MESSAGE SEQUENCE .....	17
• TIR409 SENSORS DIAGNOSTICS .....	—
• PROGRAMMED DATA DIAGNOSTICS .....	18
• TEMPERATURES DIAGNOSTICS .....	—
• COOLING FANS CONTROL .....	—
• FAN TEST .....	—
7) PROGRAMMING NT935 IR ETH .....	19
• PROGRAMMING NOTES .....	21
• VOTING FUNCTION .....	—
• INTELLIFAN FUNCTION .....	—

	PAGE
8) ETHERNET MODBUS TCP OUTPUT .....	22
• INTRODUCTION TO THE ETHERNET MODULE .....	—
• OPERATING NOTES .....	—
• DATA TRANSMISSION .....	—
• NOTES ON ETHERNET ELECTRICAL CONNECTIONS .....	—
• FUNCTION CODE .....	—
• CODE 3(10). .....	—
• CODE 16(10). .....	—
• NOTES FOR REMOTE PROGRAMMING .....	23
• ERROR CODES .....	—
• UNACCEPTABLE DATA .....	—
• ILLEGAL DATA .....	24
• MODBUS MAPPING TABLE .....	25
9) ETHERNET MODULE PARAMETER PROGRAMMING .....	30
• ETH0 CONNECTIONS .....	—
• TELNET ENABLING .....	—
• TELNET SCREEN .....	31
• IP PARAMETER PROGRAMMING MENU .....	32
10) FAIL SAFE FUNCTION .....	34
11) FCD FUNCTION .....	35
12) WARRANTY CONDITIONS .....	—
13) TROUBLESHOOTING .....	36
14) EQUIPMENT DISPOSAL .....	—
15) USEFUL CONTACTS .....	—

## SAFETY REQUIREMENTS



### ATTENTION:

Carefully read the manual before starting using the control unit. Keep the instructions for future reference.



Do not open the device, touching any internal component can result in electric shock as voltages over 50 volts can be lethal. In order to reduce the risk of electric shock, do not disassemble the back of the device. Warranty shall be void if device is opened.

**Before connecting the device to the power supply, ensure that all the connections are correct.** Always disconnect the unit from the supply before making any modification on the wiring



Any operation on the equipment must be operated by a qualified technician.

**Failure to comply with these instructions can cause damages, fires or electric shock, and possible serious injuries!**

#### POWER SUPPLY

The NT935 IR ETH control unit can be supplied from 85 to 260 Vac-Vdc, irrespectively of polarity in Vdc. Before use, ensure that the power cable is not damaged, knotted or pinched. Do not tamper with the power cable. Never disconnect the unit by pulling the cable, avoid touching the clamps.

Do not carry out any connecting/disconnecting operation with wet hands. To disconnect the device, do not use objects such as levers. Immediately disconnect the device if you smell burning or see any smoke: contact technical service.

#### LIQUIDS

Do not expose the equipment to liquid spurts or drops, do not position it in places where humidity exceeds 90% and never touch it with wet or humid hands. If any liquid penetrates the control unit, disconnect immediately and contact technical service.

#### CLEANING

Disconnect the power cable before cleaning the control unit, using a dry cloth without any solvent or detergent, and compressed air.

#### OBJECTS

Never insert objects into the openings of the control unit. If this happens, disconnect the control unit and contact technical service.

#### USE RESERVED TO QUALIFIED PERSONNEL

The purchased good is an advanced electronic device that should not be used by non-qualified personnel. Any operation must be carried out by a qualified technician.

#### ACCESSORIES

The use of non-original accessories or spare parts may damage the unit and endanger users' safety. In event of fault, contact technical service.

#### LOCATION

Install the control unit indoor, in a place protected from water splashes and sun rays. Do not place near heat sources if exceeding the parameters stated in this manual. Position on a stable surface, far from any possible vibrations. Position the unit as far as possible from intense magnetic fields.

#### REPAIRS

Do not open the control unit. In case of fault, always contact qualified personnel. The opening of the control unit and/or the removal of the series identifying label automatically make the warranty void. The warranty seal is applied to all devices, any attempt to open the unit would cause the seal to break the consequent automatic cancellation of the warranty.

#### FUNCTION

**To control the transformer correctly from a temperature point of view, enabling the VOTING function is allowed where the load distributed between the phases of the transformer is adequately balanced.**

#### TECHNICAL INFORMATION

**Mail: [ufficiotecnico@tecsystem.it](mailto:ufficiotecnico@tecsystem.it) — tel: 02/4581861**

## ACCESSORIES

The following items objects are present inside the box:


Control unit



Start guide and QR code




2 blocks for panel mounting

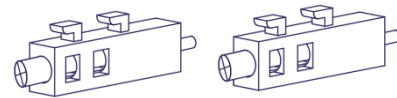

1 supply terminal 3 poles pitch 5  
Code: 2PL0367 - Screws tightening torque 0.5Nm



1 relay terminal 12 poles pitch 5  
Code: 2PL0361- Screws tightening torque 0.5Nm

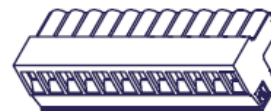

1 4.20mA input sensor terminal 12 poles pitch 3.81  
Code: 2PL0420 - Screws tightening torque 0.25Nm



**ATTENTION:** always install the device using the terminals included in the pack.  
The use of terminals other than those included with the control unit might cause malfunctions.


<b>TECHNICAL SPECIFICATIONS</b>	<b>TIR409</b>
<b>POWER SUPPLY</b>	
Maximum and minimum supply values	24V <sub>cc</sub> (min. 18 - max. 36V <sub>cc</sub> )
Maximum absorption	40mA
<b>OUTPUT</b>	
Output 4.20mA: 4mA @ -40°C, 20mA @ 200°C	•
4.20mA interface accuracy: ± 0.5% v/s ±1 digit	•
RS485 (future development)	•
<b>DIMENSIONS</b>	
69mm x 55mm x 33mm (terminal block excluded)	•
<b>TESTS AND PERFORMANCES</b>	
Construction in compliance with CE Standards	•
Protection from electrical interference CEI-EN-61000-4-4	•
IR sensor reading range: -40°C +200°C	•
IR sensor accuracy: refer to Pic.2 page 13	•
Measurement Angle 10° (FOV)	•
Operating temperature range: -20°C to + 85°C	•
Humidity 90% non-condensing condition.	•
Polycarbonate housing UL94 V0 120°C	•
Protection treatment of the electronic part	Optional

<b>TECHNICAL SPECIFICATIONS</b>	<b>NT935 IR ETH</b>
<b>POWER SUPPLY</b>	
Supply rated values	85-260 Vac-Vcc 50/60HZ
Vdc with reversible polarities	•
<b>INPUTS</b>	
4 inputs 4.20mA (-40°C @ 4mA, +200°C @ 20mA), section max 1,5mm <sup>2</sup>	•
Connections on removable terminal strips	•
Input channels protected against electromagnetic interference	•
<b>OUTPUTS</b>	
2 alarm relays (ALARM and TRIP) SPDT	•
1 sensor or operating failure (FAULT) relay SPST	•
Output relays with 10A-250Vac-res COSΦ=1 contacts.	•
2 fan management relays SPST (FAN 1 and FAN 2)	•
Ethernet output 10Base T / 100Base-TX Modbus TCP slave.	•
<b>DIMENSIONS</b>	
100x100 mm– din43700-depth .131mm (terminal block included)	Hole 92 x 92 mm
<b>TESTS AND PERFORMANCES</b>	
Construction in compliance with CE regulations	•
Protection from electrical interference CEI-EN-61000-4-4	•
Dielectric strength: 1500Vac for 1 minute between output relays and 4.20mA inputs, relays and supply, supply and 4.20mA inputs	•
Reading range: -40°C @ 4mA, +200°C @ 20mA	•
4.20mA interface accuracy : ±0,5% vfs, ±1 digit	•
Ambient operating temperature from –20°C to +60°C	•
Humidity 90% non-condensing condition	•
Frontal film polycarbonate IP65	•

<b>TECHNICAL SPECIFICATIONS</b>	<b>NT935 IR ETH</b>
Housing NORYL 94 _V0	•
Max. consumption 7,5VA	•
Self diagnostic circuit	•
Protection treatment of the electronic part	Optional
<b>DISPLAY AND DATA MANAGEMENT</b>	
2x13mm and 3 digits display for temperatures, messages and channels	•
3 leds to display state of the alarm on the selected channel (ALARM-TRIP-FAULT)	•
4 leds selection of display mode (SCAN-AUTO-MAN-T-MAX)	•
2 leds to display the state of FAN1 and FAN2	•
Temperature alarm setting 0°C to 200°C	•
2 alarm thresholds for channels 1-2-3	•
2 alarm thresholds for channel 4	•
2 ON-OFF thresholds for FAN1 and FAN 2	•
IR sensor diagnostics (Fcc-Foc-Fcd)	•
Data memory diagnostics (Ech)	•
Access to programming through front keyboard	•
Automatic exit from relay programming, display and test after 1 minute's inactivity	•
Incorrect programming warning	•
Selection between channel automatic scanning, hottest channel or manual scanning	•
Storage of maximum temperatures reached by channels and alarm status	•
Front key to reset the alarms	•
Voting function	•
Intellifan function	•
Failsafe function	•



# FRONT PANEL

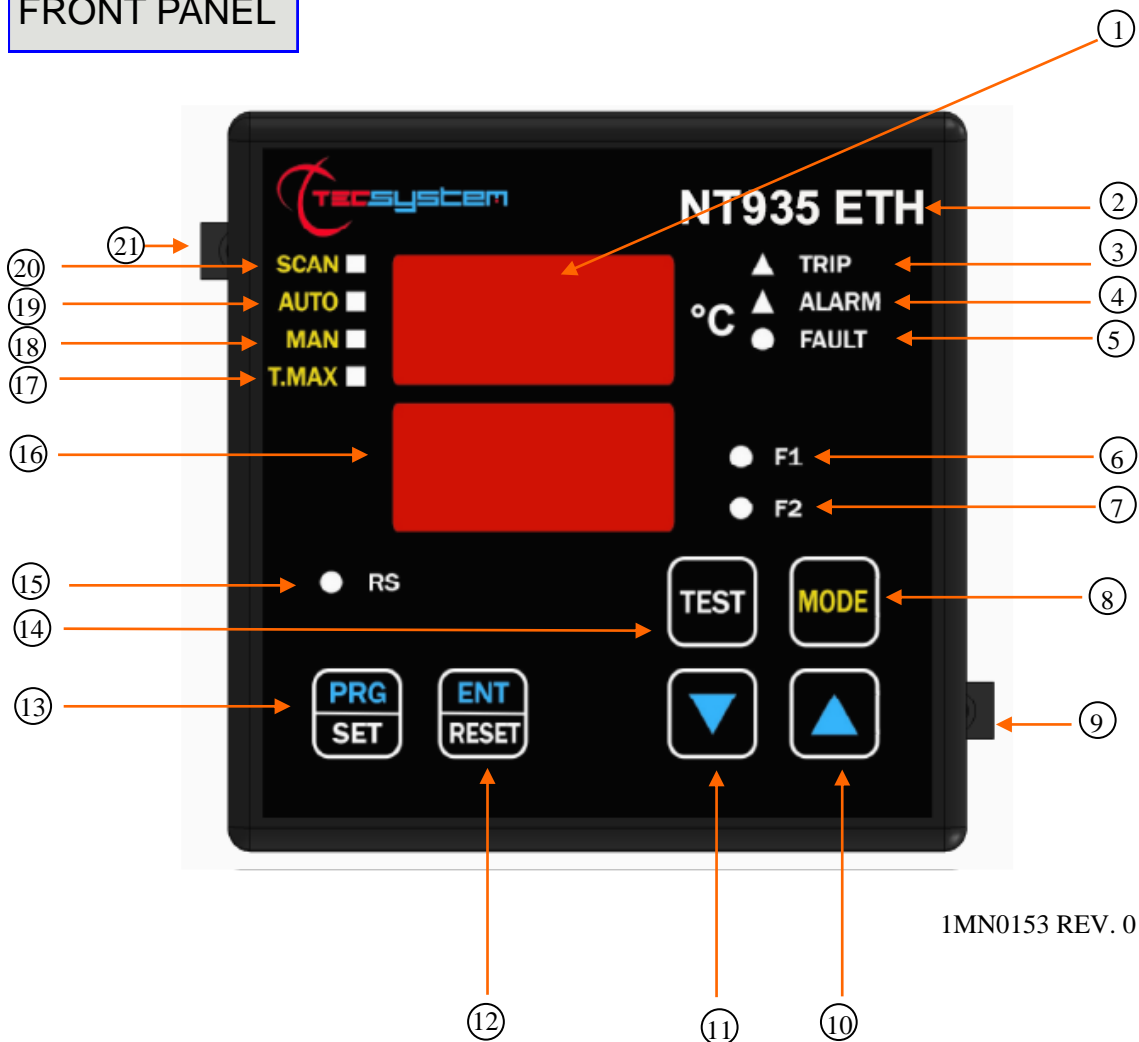

1)	3-digit temperature display	12)	Enter/Reset key
2)	Control unit series	13)	Programming/Setting key
3)	TRIP (red) LED	14)	Led/relays test key
4)	ALARM (yellow) LED	15)	Modbus RS communication (green) LED
5)	FAULT (red) LED	16)	3-digit channel display
6)	FAN 1 (yellow) LED	17)	T-max mode selection (red) LED
7)	FAN 2 (yellow) LED	18)	Man mode selection (yellow) LED
8)	Display mode selection key	19)	Auto mode selection (green) LED
9)	Fixing block	20)	Scan mode selection (yellow) LED
10)	UP key	21)	Fixing block
11)	DOWN key		

## **DISPLAY**

**The first display is dedicated to temperatures.**

**The second display is dedicated to the monitored channel.**

When the device is switched on or after a reset, the model of the control unit, the type of sensors, VER "00" (firmware version), the temperature range of the device and the unit identification are always shown on the display.

Pressing the MODE key, the display modes can be set:

- **SCAN:** the monitoring unit displays all the activated (°C) and deactivated (NO) channels scanning every 2 seconds.
- **AUTO:** the monitoring unit displays the hottest channel automatically.
- **MAN:** manual reading of the channel temperature using the up/down ▲▼ keys.
- **T.MAX:** The display shows the maximum temperature of the channel selected with the cursor keys. In the event of fault, the Tmax value is replaced with the type of fault stored (fcc-foc). Turning ON of the leds Trip-Alarm-Fault LEDs alerts us to events that have occurred. The stored values are always successive to the moment of the last T-MAX reset, for resetting the values press the RESET key.

## **OPERATING PROGRAM CONTROL**

To control the protection levels programmed, press the PRG key twice to access the **VIS** display mode. By repeatedly pressing the PRG key, you can scroll through all the previously set values in sequence. After 1 minute of keyboard inactivity, the programming display procedure is automatically abandoned.

To stop the display, press the ENT key.

## **NOTES ON SCAN AND MAN FUNCTIONS**

During the SCAN and MAN modes, the operation of the NT935 IR ETH can be displayed.

### **1) RUN cPU:**

This message appears when the device is turned on.

### **2) Ech Err:**

This message appears when a damage in the EEPROM memory is detected.

Pressing Reset will cancel the message and restore the original default parameters, listed in the programming paragraph on pages 19-20. Return the control unit to TECSYSTEM for repair.

### **3) CAL Err:**

This message appears when damage is found in the measurement circuit.

The temperature values displayed might be incorrect. Return the control unit to TECSYSTEM for repair.

### **4) Pt Err:**

This message appears when it is detected that one or more TIR409 sensors are not working correctly, FOC, FCC and FCD indications in the TIR409 sensors diagnostics section on page 17.

In case of **Err** the FAULT relay will be deactivated.

The above messages will be displayed following the 1-2-3-4 priority stated.

**NOTE:** regardless of the display mode, in case of a sensor fault (Fcc, Foc or Fcd), the control unit will automatically switch to **SCAN (PRIVILEGED SCAN)** mode, immediately allowing you to see the fault on the relative channel **CH.** (**Mode** key is disabled).

## **LED TEST**

We suggest to carry out the control unit LED test regularly.

For this operation, press the TEST key briefly; all the displays turn on for 2 seconds.

**If one of the LEDs does not work, please return the control unit to TECSYSTEM for repair.**

## **ALARM RELAY TEST**

This function allows to carry out a test of the relay operation without needing additional devices. To start the test procedure, keep the TEST key pressed for about 5 seconds: TST appears for 2 seconds, confirming you have entered the Relay Test mode.

The LED that is lit shows the relay to be tested; use the cursors ▲▼ to select the required relay.

Press the SET and RESET keys to enable and disable the relay to be tested; the display will show ON-OFF.

After 1 minute's keyboard inactivity, the RELAY TEST procedure will be automatically abandoned.

To stop the RELAY TEST procedure, press the TEST key.

**ATTENTION: accessing at the relay test mode will temporarily disable the failsafe function, the relays with function enabled switch (ALARM-TRIP-FAULT).**

## **ALARM RELAY SILENCING**

If you need to silence the ALARM signal, press the RESET key: the relay is disabled and the ALARM LED, which was fixed, will start blinking. Silencing is automatically disabled when the temperature goes below the ALARM threshold.

## TIR409 SENSOR MOUNTING

The TIR409 sensor can be fixed on the transformer upper crossbar with a plate support bracket.

In order to mount the sensor, please consider the following indications:

### MINIMUM SAFETY DISTANCES.

The minimum safety distance (D) depends on the operating voltage of the equipment to be monitored.

Check the transformer manufacturer's technical specifications mounting installing the TIR409 sensor

### OPERATING TEMPERATURE

The highest operating temperature for the electronics inside the IR sensor is 85°C.

Therefore, this value cannot be exceeded.

It is recommended to keep the sensor away from the hot air flux flowing through the LV transformer coil.

### MEASURING POINT

The diameter of the measuring point is calculated with the following formula:  $\varnothing(\text{cm}) = D(\text{cm}) \times 0.175$ . "D" represents the distance between the IR sensor and the surface to be monitored, see pictures page 13.

For example, at a distance "D" of 10cm the diameter is:

$$\varnothing = 10 \times 0.175 = 1.75 \text{ cm}$$

A laser pointer can be activated by pressing the side key. It shows a translation of 10mm in comparison with the sensor measuring point center.

### POWER SUPPLY OF THE TIR409 IR SENSORS

The TIR409 sensors can be supplied at a voltage ranging between 18 and 36 Vcc.

For a correct supply the **TECSYSTEM AU24** device is recommended.

The supply must be connected respecting the + and - polarities (pin 9 and 10).

A supply at 24Vdc is recommended.



### CONNECTION OF TIR409 SENSORS WITH THE NT935 IR ETH MONITORING UNIT

The 4.20 mA output of each TIR409 sensor must be connected to the 4.20 mA input of the relevant NT935 IR ETH control unit input channel.



As to the sensor wiring, just comply with the following installation instructions:

1. Always use a 4-wire screened cable with AWG20 or AWG22 section.
2. All the wires conductors must be twisted and screened.
3. The cable must be connected considering the + / - polarities
4. The cable screening must be connected to ground only on one side
5. The cable must not be placed near the LV / MV -HV power cables.
6. The cable must be laid straight, without any ring winding or binding.
7. Any tip used to channel the sensor wires must be properly crimped to avoid false contacts

If the instructions are not duly respected, temperature reading anomalies may occur, and in this case TECSYSTEM cannot be held responsible for any reason.

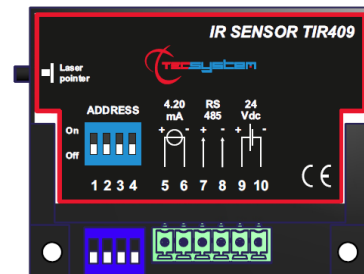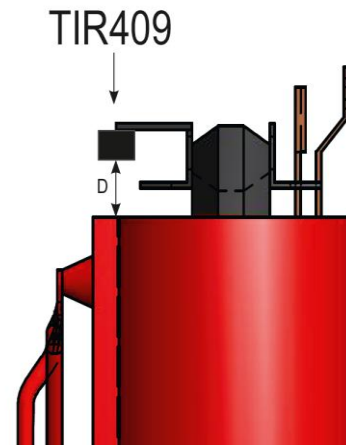

**SENSOR DIMENSIONS**

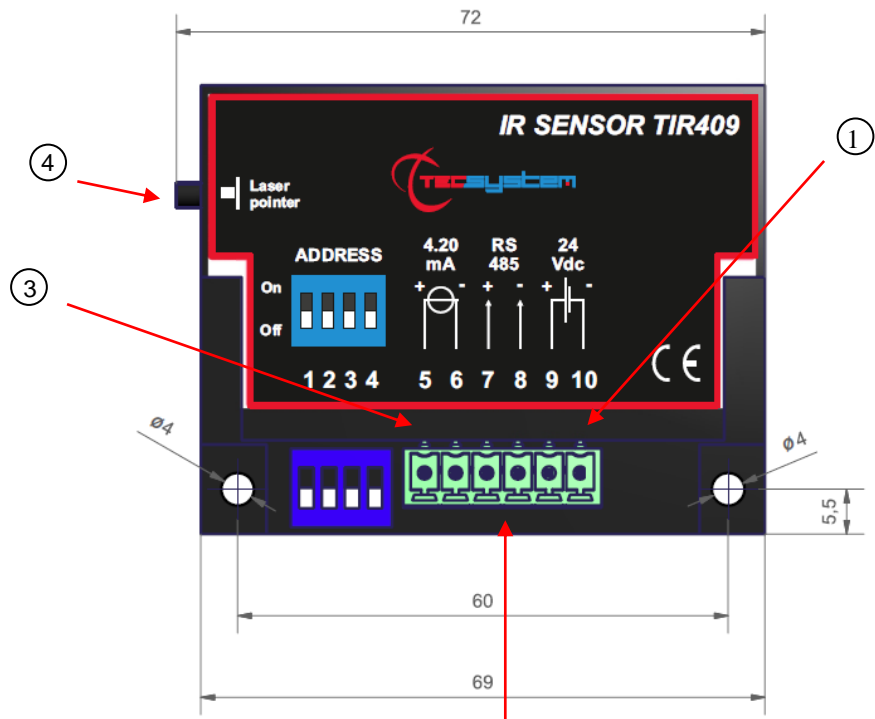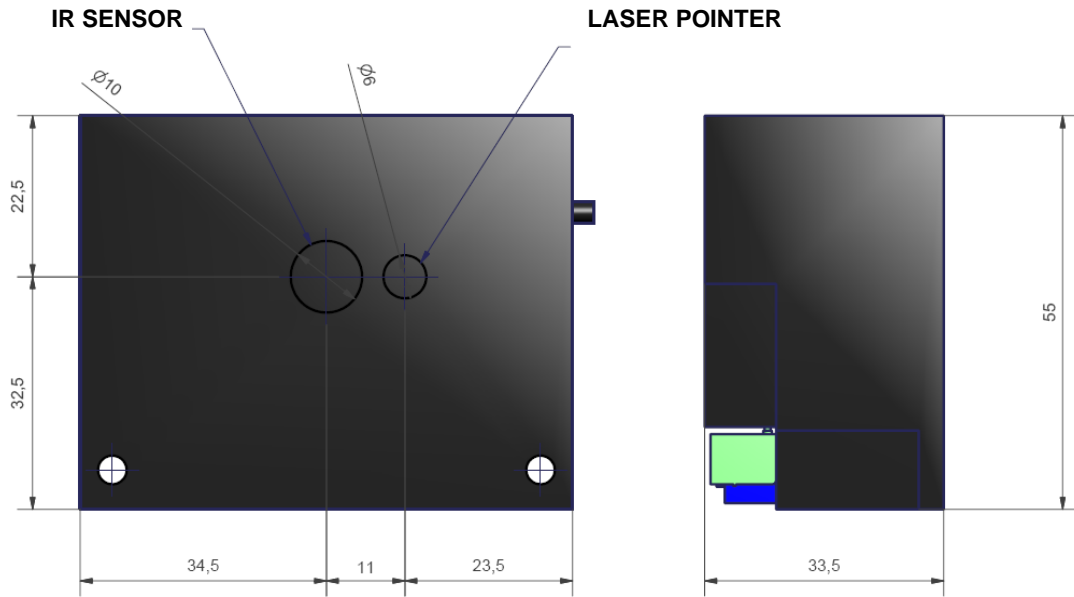


Dimensions in mm  
Tolerance  $\pm 0,5\text{mm}$

1MN0106 REV. 0

1)	TIR409 supply - 18-36 Vdc	3)	4.20mA Output
2)	RS485 Modbus output (not used)	4)	Laser pointer button

**SENSOR MEASUREMENT CONE**

**LASER POINTER**

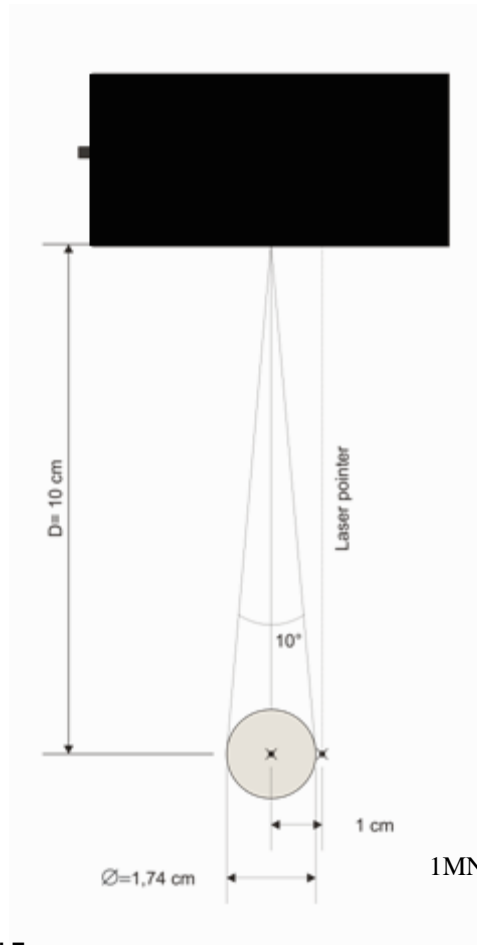

1MN0106 REV. 0

**INFRARED SENSITIVE ELEMENT ACCURACY TABLE**


To, °C	± 4 °C		± 3 °C		
			± 3 °C		
	± 4 °C	± 3 °C	± 2 °C	± 2 °C	
	± 3 °C	± 2 °C	± 1 °C	± 1 °C	
	± 2 °C	± 1 °C	± 0,5 °C	± 1 °C	
0	± 3 °C	± 1 °C	± 1 °C	± 2 °C	
	-40	-20	0	50	Ta, °C

Ta: Ambient temperature  
To: Temperature of the item to be monitored

1MN0106 REV. 0

## MOUNTING


Drill a 92 x 92 mm hole in the panel sheet.

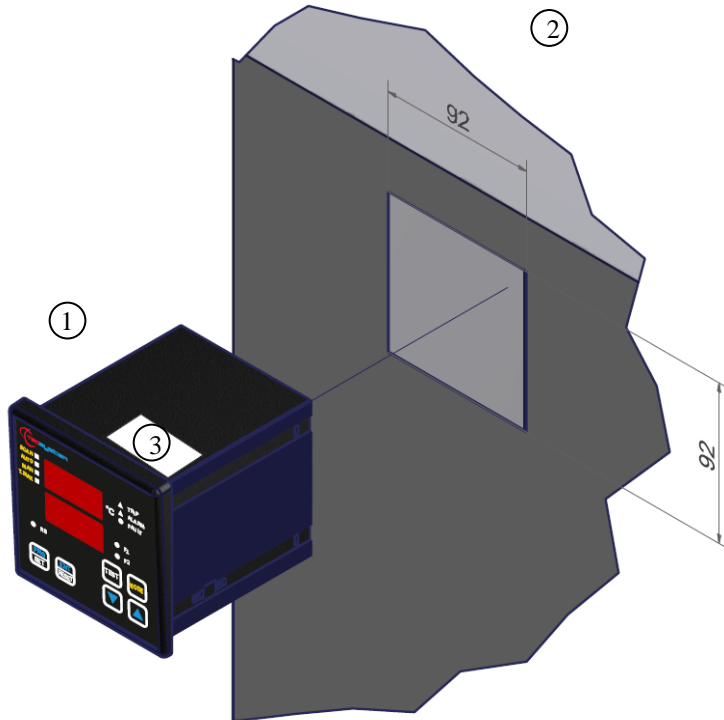

1MN0007 REV. 0

1)	Control Unit	2)	Hole dimensions (tolerance +0.8 mm)
3)	Identification label		

Fix the unit securely with the blocks supplied.

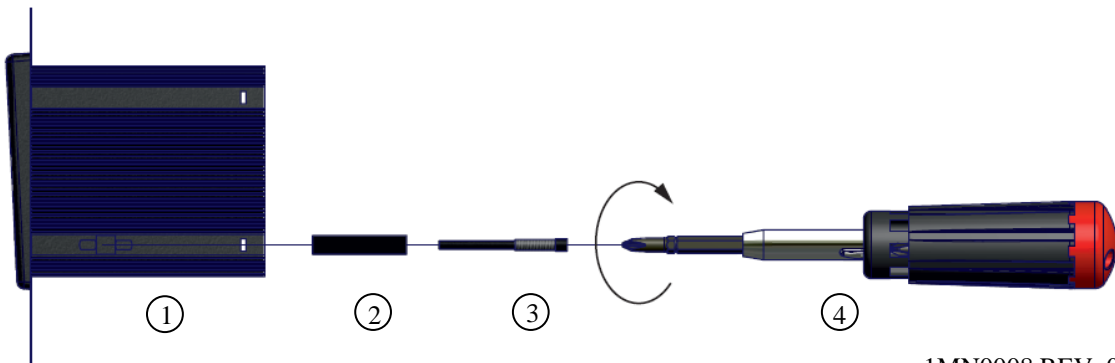


1MN0008 REV. 0

1)	Control Unit	3)	Fixing screw
2)	Fixing blocks	4)	Crosshead screwdriver #1X100mm

# ELECTRICAL CONNECTION

NT935 IR ETH

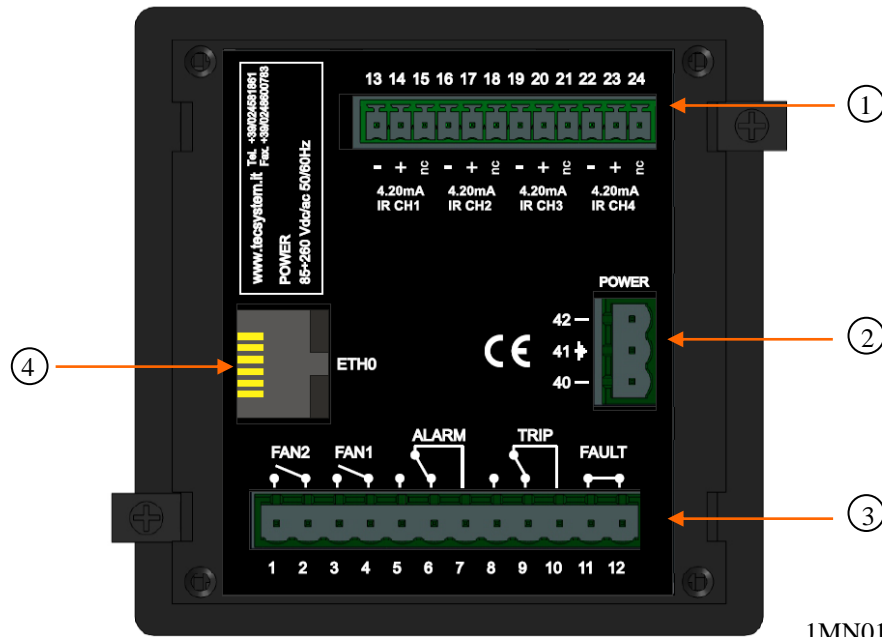


1MN0153 REV. 0

1)	TIR409 Sensors Input (4.20mA +/-) nc: not connected	3)	Relays (FAN2-FAN1-ALARM-TRIP-FAULT)
2)	85-260Vac-dc 50/60Hz power supply	4)	Ethernet output 10Base T / 100Base-TX Modbus TCP slave.

Note: relay contact image in non-alarm condition, with the exception of the FAULT relay that switches: contacts 11-12 open (NO) contacts 11-12 closed (NC) fault condition identification. Read the Alarms and Ventilation paragraph on page 16/17 and see the opening of the fault contact.


## RELAY CONNECTION EXAMPLE

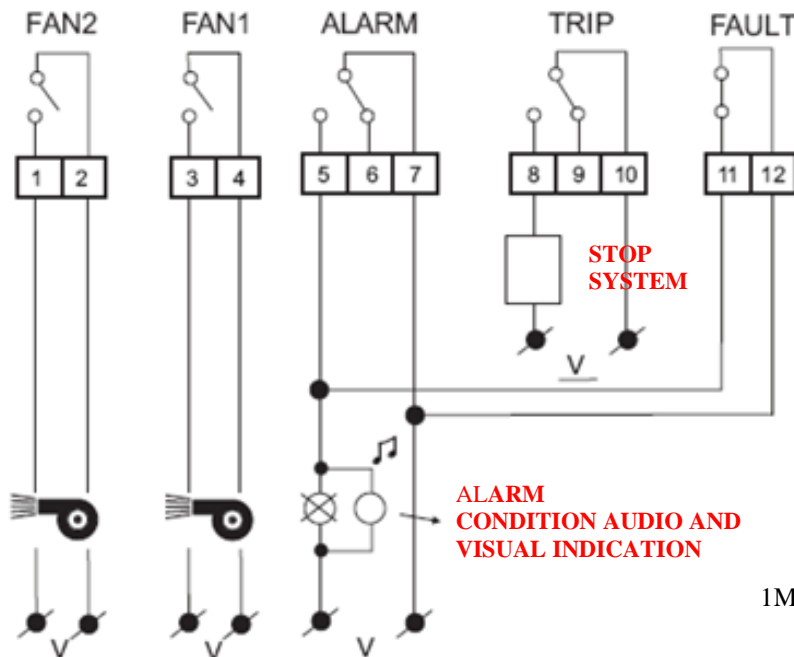

1MN0095 REV. 0

Output relay with 10A-250Vac-res COSΦ=1 contacts.

## TIR409 SENSOR SONDA TIR409

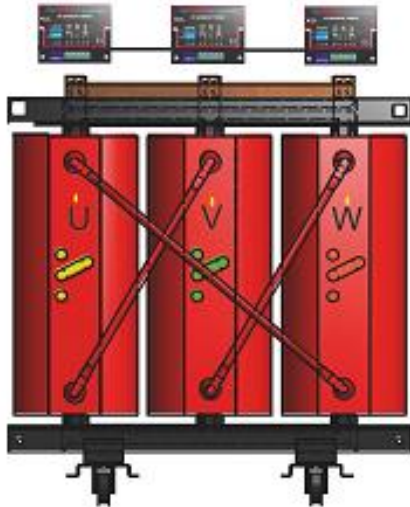

Remark: before connecting the sensors to the control unit, read carefully the section "CONNECTION OF TIR409 SENSORS WITH THE NT935 IR MONITORING UNIT" page 11.



**ATTENTION:** Before carrying out any electrical test on the transformer (i.e. dielectric strength, etc.), it is recommended to disconnect both sensors and control unit. Any interference or voltage surges on the 4.20mA inputs/outputs or on the supply might cause the sensors or control unit to fail.

## TRASFORMATORE TRANSFORMER

### **POWER SUPPLY**

The NT935 IR ETH control unit can be supplied by 85 to 260 Vac-Vdc, 50/60Hz irrespectively of polarity in Vdc (terminals 40-42).

This is obtained thanks to the use of a tested power supply unit, newly designed and manufactured, that frees installers from worrying about the correct Vac and Vdc supply.

The ground must always be connected to terminal 41.

When the unit is supplied directly by the secondary of the transformer to protect, it can be burnt out by strong overvoltages.

This happens if the main switch is closed and the transformer has no load (blank test).

The above-mentioned problems are much more evident when the 220 Vac voltage is taken directly from the transformer secondary bars and there is a fixed capacitor battery to phase the transformer itself.

*To protect the control unit from line overvoltages, we suggest using the PT-73- 220 electronic discharger, designed by TECSYSTEM S.r.l. for this specific purpose. As an alternative we suggest using 110 Vac or, even better, 110 Vdc supply voltages.*

**If an existing control unit must be replaced with a new one, to guarantee its correct and safe operation, the sensor/relay/supply connecting terminals must be replaced with the new terminals supplied.**

### **ALARMS AND VENTILATION**

Carry out the electrical connections on the removable terminal blocks only after disconnecting them from the unit. When the control unit is in one of the modes mentioned below, it does not monitor the temperature and the relays are all inhibited. The fault contact switches and the fault LED flashes.

- Vis. programming display
- PRG Programming
- Relay test

The ALARM and TRIP relays switch only when the pre-set temperature thresholds have been exceeded.




The FAULT contact, programmed in failsafe mode (default YES), opens (11-12) when the equipment is switched on and only if the unit detects no fault. It holds this condition until one of the following events occurs:

- Data memory fault (Ech message).
- TIR409 sensor fault (FCC minimum full scale value exceeded (or disconnected sensor), FOC maximum full scale value exceeded – FCD quick temperature increase)
- CAL damage to the measurement circuit.
- Insufficient supply voltage.
- During the power on reset mode after programming (PRG) and during the displaying data mode (VIS) and test relay.


The FAULT failsafe can be disabled selecting FAULT failsafe "NO" see step 34-35 programming page 20.

NOTE: do not connect the FAULT relay to the transformer tripping circuit to avoid unwanted system interruptions.

#### FAULT CONTACT OPERATION (failsafe enabled)

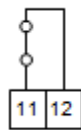

**FAULT 11-12 NC: ALARM FAULT OR POWER OFF**

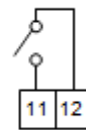

**FAULT 11-12 NO: POWER ON OR NO FAULT**

NOTE: do not connect the FAULT relay to the transformer tripping circuit to avoid unwanted system interruptions.

The FAN1 and FAN2 contacts can be used to control the cooling fans, or they can be inserted in the conditioning system of the transformer room, see section Fan control on page 18.

NOTE: always disconnect the unit before performing any electrical connections.

#### FAULT AND RESET MESSAGE SEQUENCE

Here below the sequence of the fault messages and the RESET function condition.

1) ECH	eprom fault	erasable message
2) CAL	measurement circuit fault	erasable message
3) FCD	quick temp. increase fault	resettable condition
4) ERR PT	FCC or FOC sensor fault	non-resettable and fixed condition

#### TIR409 SENSOR DIAGNOSTICS

In case of failure or when the maximum/minimum full scale value of one of the TIR409 sensors installed on the machine to be monitored is exceeded, the FAULT relay switches immediately and the relative FAULT warning is displayed on the relevant channel.

Display message **FCC** I<4mA or full scale minimum value exceeded or disconnected sensor  
 Display message **FOC** I>20mA or full scale maximum value exceeded.

In order to cancel the message and to restore the FAULT switch it is necessary to check the TIR409 sensor connections and, in case, replace the faulty sensor. In case the minimum/maximum full scale value has been exceeded, it must be sure that the ambient conditions are the same as indicated in the unit.

Note: The minimum/maximum full scale value may be determined by interferences on the sensor lines. In this case it is recommended to check the correct installation of the sensors and CONNECTION OF TIR409 SENSORS WITH THE NT935 IR MONITORING UNIT (page 11)

Before connecting the sensor and the 4.20mA inputs please verify the + and – polarities and the supply voltage.



**NOTE:** the use of cables not complying with the above might cause reading anomalies. It is always important to take into account that any interference on the signal lines might cause anomalies on the TIR409 inputs (CH1-CH2-CH3-CH4) or on the sensors themselves.

### **PROGRAMMED DATA DIAGNOSTICS**

In case of failure of the internal memory or corruption of programmed data just after unit switching on, **Ech** is displayed with the relevant Fault contact.

In this case, for safety reasons, the default parameters are set automatically (see "Programming table" on pages 19-20). Eliminate **Ech** by pressing RESET and run programming to enter the required values.

Finally switch the unit off and back on to check if the memory works correctly. If it is damaged, **Ech** message will be displayed again (send the control unit to TECSYSTEM S.r.l. for repair).

### **TEMPERATURE DIAGNOSTICS**

When one of the temperature sensors senses a temperature 1°C higher than the alarm threshold, 5 seconds later the **ALARM** relay switches and the *ALARM* LED of the affected channel (CH*n*) lights up.

When the trip temperature limit is exceeded, 5 seconds later, the **TRIP** relay switches and the *TRIP* LED of the affected channel (CH*n*) lights up.

As soon as the recorded temperature returns to values equal to or lower than the limit set for the **ALARM** and **TRIP** relays switching, these relays de-energise and the corresponding LEDs switch off.

The **ALARM** and **TRIP** values are kept in the internal memory: they can be recalled by entering the Vis modes (programmed parameter display) and modified in PRG (programming) mode.

### **COOLING FAN CONTROL**

The NT935 IR ETH is fitted with two FAN controls (FAN1 and FAN2) and, if programmed correctly, can control the fans switching ON and OFF to cool the transformer.

The FAN1 and FAN2 contacts can manage cooling the transformer and the room where it is installed.

By connecting FAN1 to the tangential cooling system (the two bars on the transformer) and FAN2 to the extractor, you will improve the air flow in the cabin; moreover, the cabin temperature will no longer need to be managed by a thermostat outside the system.

The fans can be controlled in two different ways:

- Using the temperatures sensed by the sensors on the three columns (FAN1)

**CHF 1.2.3**  
(ex. ON at 70°C - OFF at 60°C)

- Via an extra sensor (**CH4/YES**) dedicated to the ambient temperature inside the transformer room (FAN2).

**CHF 4**  
(ex. ON at 45°C - OFF at 35°C)

The ON and OFF values are programmable according to the device range, FAN ON must always be greater by at least 1° C since FAN OFF (recommended  $\Delta$  FAN (POWER ON-OFF) + 10 ° C.

The FAN 1 / FAN 2 LED light up when the temperature exceeds 1°C the FAN ON threshold, the corresponding relay switches, and turns off when the temperature goes below 1°C the FAN OFF threshold, the corresponding relay switches.

### **FAN TEST**

By programming (**HF*n***), it is possible to have the fans operating 5 minutes every "*xxx*" hours, regardless of the columns or ambient temperature values (i.e.: with HF*n*=001 the fans are activated for 5 minutes every hour). This function aim is to verify the fan operation and to check equipment status periodically.













By setting **NO** this function is inhibited.

To enable the Hf*n* function, read the "Programming" section on pages 19-20.

# PROGRAMMING

## NT935 IR ETH

STEP	PRESS	EFFECT	PRESS	NOTES
1		Hold the PRG key until PRG SET is shown on the display		
2		Select PRG SET for entering in the programming mode or PRG 1 to restore the default programmed value.	 	PRG 1 default value
3		The ALARM threshold for (CH 1-2-3) is displayed. Set the required value. ALARM LED flashes	 	Default 90°C
4		The TRIP threshold for (CH 1-2-3) is displayed TRIP LED flashes		
5		Set the required value	 	Default 119°C
6		FAN1 (CH 1-2-3) is displayed. FAN1 LED flashes		Default YES
7		SELECT YES/NO /INT	 	If INT is selected, read "functions note" pag.21
8		(CH4) is displayed. Enabling CH4		
9		Select YES or NO	 	if YES is selected, CH4 is enabled. If no, CH4 is disabled
10		The ALARM threshold for (CH4) is displayed. Set the required value. ALARM LED flashes		Se CH4=NO salta al passo 16, Default NO
11		Set the required value	 	Default 120°C
12		The TRIP threshold for (CH4) is displayed TRIP LED flashes		
13		Set the required value	 	Default 140°C
14		FAN2 (CH4) is displayed. FAN2 LED flashes		Default Yes
15		Select YES/NO	 	
16		ON (CH 1-2-3) is displayed. FAN1 blinks		Default 70°C
17		Set the required FAN1 ON threshold	 	If FAN 1 NO is selected, skip to step 21. If INT is selected, FAN1 and FAN2 Leds blink
18		OFF (CH 1-2-3) is displayed. FAN1 blinks		Default 60°C
19		Set the required FAN1 OFF threshold	 	

20		ON (CH4) is displayed. FAN2 blinks		Default 45°C
21		Set the required FAN2 ON threshold	 	If FAN 2 NO is selected, skip to step 24
22		OFF (CH4) is displayed. FAN2 blinks		Default 35°C
23		Set the required FAN2 OFF threshold	 	
24		HFN (NO) is displayed FAN1-FAN2 leds blink		Fans test for 5 min. every "n" hours
25		Set the number of hours required	 	Default NO = function disabled
26		FCD (NO) is displayed		Fault for quick temperature increase (°C/sec)
27		Set the required value (info FCD page 35)	 	Default NO (function disabled)
28		VOT (NO) is displayed (info Voting page 21)		
29		Select YES/NO	 	Default NO (function disabled)
30		The display shows FLS (ALARM) flashing LED ALARM (info FAIL SAFE on page 34)		
31		Set YES or NO	 	Default NO
32		The display shows FLS (TRIP) LED flashes TRIP		
33		Set YES or NO	 	Default NO
34		The display shows FLS (FAULT) LED flashes FAULT		
35		Set YES or NO	 	Default YES
36		END is displayed		End of programming
37		Press ENT to save the data and exit from programming		Err: incorrect programming of the LED values (note 6)
38		Return to step1		See "Programming Notes" on page 21



**ATTENTION:**

It is recommended to check the unit programming before starting using the device.

The default parameters set by TECSYSTEM might not match your requirements.

The programming of the device is under end user's responsibility. The alarm thresholds setting and the enabling of the functions described in this manual must be verified by a qualified technician keeping into consideration the application and features of the plant where the control unit is installed.

## PROGRAMMING NOTES

- 1) The MODE key allows going backwards in the programming steps according to the sequence 28-26-8-1.
- 2) The TEST key allows exiting programming mode without saving the modified data.
- 3) After 1 minute of inactivity the programming mode is abandoned without saving the data.
- 4) During programming, the control unit does not control/protect the monitored machine.
- 5) At the end of program, of the control unit is restarted and the FAULT relay is disabled until the unit is fully restarted.
- 6) If pressing ENT, the message "Err" is displayed, one of the following mistakes has been made:

ERR ALL. = ALARM  $\geq$  TRIP

ERR FAN = FAN-OFF  $\geq$  FAN-ON. (FAN1 O FAN2)

ERR INT = INT FAN-OFF  $\geq$  FAN-ON (FAN1) DELTA  $<10^{\circ}\text{C}$

The device automatically switches to the programming step of the mistake.

**REMARK: EVERY TIME THE CONTROL UNIT IS PROGRAMMED AND ENDED WITH DATA SAVING, THE VALUES SAVED IN T-MAX ARE RESET.**

## VOTING FUNCTION

The voting function is coming from the concept of redundancy which consists in the duplication of the components of a system with the aim of increasing its **reliability**.

How **VOTING** works?

As per the concept previously indicated, the sensors are installed to monitor the operation of the electrical machine, but at the same time, to ensure the proper operation of the probes themselves, avoiding false alarm warnings (generated by installation errors or failures).

**VOTING** can be enabled by selecting **VOTING "YES"** when programming. The control unit compares the temperature values measured on the CH1-CH2-CH3 channels and enables the switching of the tripping contact (**TRIP**) only if the TRIP threshold on at least two channels in the same period T has been exceeded.

If **VOTING "NO"** is selected, the function will be disabled.

Remark: In any case, the switching of the **ALARM** threshold will cause the ALARM warning to be displayed on the relevant channel.

To enable Voting, read the "programming" section on pages 19-20.



**Attention: To control the transformer correctly from a temperature point of view, the enabling of the VOTING function is recommended only where the load distributed between the phases of the transformer is adequately balanced. In addition, when voting is enabled, FAULT conditions of FCC-FCC-FCD on two or more channels can determine the inhibition of the TRIP contact.**

## INTELLIFAN FUNCTION

**What it is for:**

Intellifan function allows to reduce the thermal shock on the transformer by anticipating (one bar at the time) the activation of the cooling system.

The decrease of the thermal shock allows to improve lifespan of the transformer and of the ventilation system itself.

Enabling **FAN1 "INT"**, the control unit will alternate the activation (every 30 minutes) of the FAN1-FAN2 contacts, anticipating the cooling system activation at the temperature average value between FAN1 ON and FAN1 OFF.

EX. FAN1 ON =  $70^{\circ}\text{C}$  and FAN1 OFF =  $60^{\circ}\text{C}$  **INTELLIFAN START =  $65^{\circ}\text{C}$**

Before enabling the function, please check that the connection on the two fan bars is distributed so that to have the bar on the right side connected to relay FAN2, pin 1-2, and the bar on the left side connected to FAN1, pin 3-4 .

By selecting **FAN1 "NO or YES"**, the function shall be disabled.

Remarks: when the FAN1 threshold is exceeded the control unit shall activate both bars operation.

In order to enable **INTELLIFAN function please refer to "Programming"** section page 19-20.

**Note: for correctly working of the INTELLIFAN function we recommend you observe  $\Delta T 10^{\circ}\text{C}$  between FAN1 ON and FAN1 OFF. The connection to the VRT series devices, where Intellifan is enabled, must be made between the contacts FAN1 - COM-EN1 and FAN2 - COM-EN2.**

# ETHERNET MODBUS TCP OUTPUT

## **INTRODUCTION TO THE ETHERNET MODULE**

The Ethernet connectivity of the new NT935 IR ETH allows you to implement the functions of the Tecsystem control units directly into your monitoring system, with maximum 8 Modbus TCP nodes.

The integrated module includes all the essential network features, among which a 10Base T / 100Base-TX Ethernet connection, TCP / IP full stack suitable to work as Modbus TCP slave.

The unit can be used for remote configuration, monitoring in real time or problem solving.

The Windows-based Telnet system allows configuring the NT935 IR ETH easily into a sub-network with specific IP addresses.

## **OPERATING NOTES**

The communication of the temperature control monitoring unit is active only when the NT935 IR ETH is in temperature control mode (Scan, Auto, Man and T.Max).

When other functions such as programming, programming display and relay test are activated, the ModBus communication is temporarily deactivated.

## **DATA TRANSMISSION**

The Ethernet module allows you to connect to the control unit through Modbus TCP slave so that you can: read the data on the Modbus table on page 25 and write those in the paragraph regarding the remote programming notes.

The ETH module is always in slave mode.

The NT935 ETH control unit is in communication with the network only when it is in temperature reading mode, while it is inactive when in the following modes: display, programming and relay test.

## **NOTES ON ETHERNET ELECTRICAL CONNECTIONS**

As to the signal cable to use in order to guarantee correct operation, it is necessary to use a CAT 7 Ethernet cable with RJ45 connector with the following specifications:

- 4 twisted pairs 23AWG
- Tinned copper braid with an 80% cover.
- Always position the Ethernet cable far from power cables.

## **FUNCTION CODE**

The ModBus module supports the following function codes:

**3<sub>(10)</sub>**: - holding register reading

**16<sub>(10)</sub>**: - register multiple writing

**If ModBus receives a message and a CRC error is detected, no answer is given.**

### **CODE 3<sub>(10)</sub>**

Request:

Slave address, code 3<sub>(10)</sub>, Starting address HI, Starting address LO, Number of Point HI, Number of Point LO, Crc LO, Crc HI.

Answer:

Slave address, code 3<sub>(10)</sub>, Byte count, Data HI, Data LO....., Crc LO, Crc HI.

### **CODE 16<sub>(10)</sub>**

Request:

Slave address, code 16<sub>(10)</sub>, Starting address HI, Starting address LO, Number of Point HI, Number of Point LO, Byte count, Data HI, Data LO....., Crc LO, Crc HI.

Answer:

Slave address, code 16<sub>(10)</sub>, Starting address HI, Starting address LO, Number of Register HI, Number of register LO, Crc LO, Crc HI.

## NOTES FOR REMOTE PROGRAMMING

The writeable registers are shown in the MODBUS MAPPING TABLE as W or RW (**write or read/write**) max number of registers 72, see table page. 25.

Channels 1-3 are not disabled; in case of incorrect setting, they are always forced as enabled channels.

If the channel 4 is not enabled and/or the information is not provided for, the following answers are given:

1. **Measured temperatures** = 0000 (0°C)
2. **Temperature AL./TRIP** = Value written in E2PROM
3. **Channel state** = 0000
4. **Channel setting** = %00000000; %xxxxxxx0 (x=n.d.)

If writing information is sent towards a READ-only register, the data will be binned without affecting the message received.

Also in remote programming via ModBus you must take into consideration that the Alarm thresholds must be lower than the Trip thresholds and that the Fan-on thresholds must be higher than the Fan-off thresholds.

If you try to set these thresholds wrongly, the NT935 IR ETH monitoring unit won't proceed with programming and data storage; therefore in the following readings you will read the data relevant to the previous programming.

After sending a writing request, the monitoring unit will require approximately 1" to store the data in eeprom; during the storage phase, the ModBus module will not be able to process other requests.

If the programming request is successful, the control unit automatically resets and loads the newly set values.

The information "RELAY STATUS" indicates the state of excitation of the coils of the relays, so it will be subject to the commands of "FAIL SAFE".

At the end of the Write command, data compatibility is checked:

1. **in case of incompatibility, the answer is an "exception" and the data packet is refused in full. The code of the first wrong datum can be requested reading the "Datum error received" register. (NB: this code is lost during RESET, switching on or data writing in E2PROM);**
2. **if the data are correct, they are transferred into the non-volatile memory (E2PROM), historical data are cancelled (Tmax=0°C) and, then, a system RESET is forced.**
3. **If the WRITE command entails only writing "COMMANDS", it will be performed autonomously and without a RESET, that is without affecting the control unit data.**

### **ERROR CODES (exception codes)**

In case of a wrong request, ModBus will answer with modified codes and codified errors according to the following:

- 1: - Unsupported function code
- 2: - Wrong data address
- 3: - Wrong data (for instance length)

The memory area containing the HFN datum must undergo no forcing.

In the case in which all the fans are turned off (F1, F2) the test of the relay will not take place.

### **UNACCEPTABLE DATA**

Some programming is unacceptable since the NT935 IR ETH does not provide for it; these data are discarded with no EXCEPTION CODE.

- CH 1-2-3: → channels cannot be disabled
- CH 1-2-3: → FAN\_2 cannot be enabled
- CH 4: → FAN\_1 cannot be enabled
- CH 4: → FAN\_INT cannot be enabled
- CH 4: → FAN\_2 cannot be enabled if CH 4=no

## ILLEGAL DATA

On the other hand, some combinations are programming errors because they are wrong settings; in this case the error code is ILLEGAL\_DATA. This information is accessible to ModBus reading the register 7.

NO ERROR		No error 00
CH_1 Trip ≤ Alarm		Code error 01
CH_4 Trip ≤ Alarm		Code error 04
FAN_1 ON ≤ OFF OR FAN INT ≤ 10		Code error 017
FAN_2 ON ≤ OFF		Code error 018
Value HFN > max	see table: SYSTEM - Setting and Status	Code error 020
Value FCD > max	see table: SYSTEM - Setting and Status	Code error 021
Value 4.20 > max	see table: SYSTEM - Setting and Status	Code error 022
Value Voting > max	see table: SYSTEM - Setting and Status	Code error 023

Note. If the value of Voting is higher than the max value expected for the model in question, it will be set equal to "0", that is NO\_VOTING.

## GENERAL UNIT NOTE

The models of the unit can be equipped with different options ; to avoid disruption of production , their existence is defined by Fw indicated power , with messages dedicated on display LEDs .

This information can be accessed by reading the Modbus register 6 ( option ) with the following meaning :

LOW Byte

Bit\_1 = Ethernet

HIGH Byte

Bit\_0/1 = 10 - Range -40°C ÷ +200°C

In case of Ethernet option Modbus and 4.20mA mode shall not be active on the display. They will be readable from the log.

Note: in case the values programmed from ModBus are out of range, it will generate a "exception" error response to date.



## MODBUS MAPPING TABLE

### HEADER (information and commands):

Address LO <sup>(10)</sup>	Data HI	Data LO	R: read W:write RW: read/write
1	Model – MSD (ASCII)	Model - 3° Digit (ASCII)	R
2	Model - 2° Digit (ASCII)	Model – LSD (ASCII)	R
3	Space (20H)	Vers. Fw – MSD(ASCII)	R
4	Vers. Fw - 2° Digit (ASCII)	Vers. Fw – LSD(ASCII)	R
5	Channels qty. (2*ASCII)		R
6	Options (see remarks)	Options (see remarks)	R
7	00	Error in received data	R-see table
8	00	Info several reasons	R-see table
9	00	Commands	W-see table

### SYSTEM: Setting and Status

Address LO <sup>(10)</sup>	Data HI	Data LO	Note 1	Note 2	R: read W:write RW: read/write
10	00	HFN (Fan test)	0=No test	1÷200h	RW
11	00	FCD	temperature increase	0=No FCD 1÷30°/sec	RW
12	00	Voting	0=No 1= Enable		RW
13	00	CPU Setting	See Note		RW
14	00	CPU Error	See Note		R
15	00	Relay Status	See Note		R
16	00	FREE	See Note		RW

17	00	Address	Modbus address	1÷255	R
18	00	Bdr	Modbus baud rate	0=2400 1=4800 2=9600 3=19200 4=38400	R
19	00	Parity	Modbus parity bit	0=N-1 None(1stop) 1=Even 2=Odd 3=N-2 None(2stop)	R
20	00	FREE	See Note		R

#### TEMPERATURE FANS:

Address LO (10)	Data HI	Data LO	Note 1	Note 2	R: read W:write RW: read/write
21	2'compl. sign	Fan_1 ON	1°C ÷ 200°C		RW
22	2'compl. sign	Fan_1 OFF	1°C ÷ 200°C		RW
23	2'compl. sign	Fan_2 ON	1°C ÷ 200°C		RW
24	2'compl. sign	Fan_2 OFF	1°C ÷ 200°C		RW

#### TEMPERATURE Channels 1÷4:

Address LO (10)	Data HI	Data LO	Note 1	Note 2	R: read W:write RW: read/write
25	2'compl. sign	2'compl. Ch1 temper.	-48°C ÷ 200°C		R
26	2'compl. sign	2'compl. Ch1 max temperat.	0°C÷200°C		R
27	2'compl. sign	2'compl. Ch1 temper. alarm set point	1°C÷200°C	(AL)	RW
28	2'compl. sign	2'compl. Ch1 temper. trip set point	1°C÷200°C	(TRP)	RW
29	2'compl. sign	2'compl. Ch2 temper.	-48°C ÷ 200°C		R
30	2'compl. sign	2'compl. Ch2 max temperat.	0°C÷200°C		R
31	2'compl. sign	2'compl. Ch2 temper. alarm set point	1°C÷200°C	As (AL)	R
32	2'compl. sign	2'compl. Ch2 temper. trip set point	1°C÷200°C	As (TRP)	R
33	2'compl. sign	2'compl. Ch3 temper.	-48°C ÷ 200°C		R
34	2'compl. sign	2'compl. Ch3 max temperat.	0°C÷200°C		R

35	2'compl. sign	2'compl. Ch3 temper. alarm set point	1°C÷200°C	As (AL)	R
36	2'compl. sign	2'compl. Ch3 temper. trip set point	1°C÷200°C	As (TRP)	R
37	2'compl. sign	2'compl. Ch4 temper.	-48°C ÷ 200°C		R
38	2'compl. sign	2'compl. Ch4 max temperat.	0°C÷200°C		R
39	2'compl. sign	2'compl. Ch4 temper. alarm set point	1°C÷200°C	(AL)	RW
40	2'compl. sign	2'compl. Ch4 temper. trip set point	1°C÷200°C	(TRP)	RW
41	00	00			R
42	00	00			R
43	00	00			R
44	00	00			R
45	00	00			R
46	00	00			R
47	00	00			R
48	00	00			R
49	00	00			R
50	00	00			R
51	00	00			R
52	00	00			R
53	00	00			R
54	00	00			R
55	00	00			R
56	00	00			R

**CHANNELS 1÷4: Setting**

Address LO (10)	Data HI	Data LO	Note 1	Note 2	R: read W: write RW: read/write
57	00	Ch1 Setting	See Note CHx		RW
58	00	Ch2 Setting	See Note CHx		R
59	00	Ch3 Setting	See Note CHx		R
60	00	Ch4 Setting	See Note CHx		RW
61	00	00	--		R
62	00	00	--		R
63	00	00	--		R
64	00	00	--		R

**CHANNELS 1÷4: Status**

Address LO (10)	Data HI	Data LO	Note 1	Note 2	R: read W: write RW: read/write
65	Ch1 story	Ch1 status	See Note CHx		R
66	Ch2 story	Ch2 status	See Note CHx		R
67	Ch3 story	Ch3 status	See Note CHx		R
68	Ch4 story	Ch4 status	See Note CHx		R
69	00	00	--		R
70	00	00	--		R
71	00	00	--		R
72	00	00	--		R

**REGISTER NOTE**

**INFO various causes (READ)**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	--	--	-	-	-	-	(*) RESET (R) has taken place

**COMMANDS (WRITE)**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	--	--	-	-	(*) Reset CPU_Error	(*) Reset historical data	(*) Zero. BIT: RESET has taken place

**CHn SETTING**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	--	--	--	FAN_INT	FAN2	FAN1	CAN_enable.

**CHn STATUS**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	TRIP	ALARM	FAN_2	FAN_1	FCD	FOC	FCC

**CHn STORY**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	TRIP	ALARM	--	--	--	FOC	FCC

**RELAY STATUS (coil energizing status)**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	--	--	FAULT relay 1=ON	TRIP relay 1=ON	ALARM relay 1=ON	FAN_2 relay 1=ON	FAN_1 relay 1=ON

**CPU ERROR**

BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	--	--	--	PT ERROR	CAL	FCD Fault	ECH

**CPU SETTING**


BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0
--	--	--	Failsafe fault	Failsafe trip	Failsafe alarm	--	--

# ETHERNET MODULE PARAMETER PROGRAMMING

For Windows Vista, 7, 8.

## ETH0 CONNECTIONS

Using an Ethernet cable, connect the RJ45 ETH0 of the NT935 IR ETH control unit to the ethernet card of a PC.

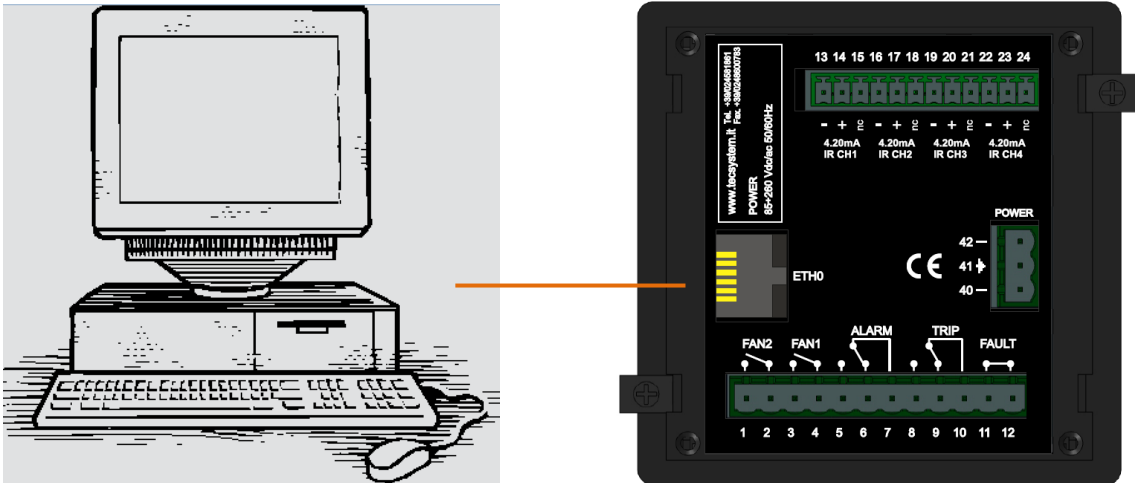

## TELNET ENABLING

Use the Telnet program to set the Ethernet IP parameters.


1) START menu (Windows)




2) Start the search with the Telnet program  
Entering telnet in SEARCH.

If the Telnet program is not enabled:

3) START menu (Windows):

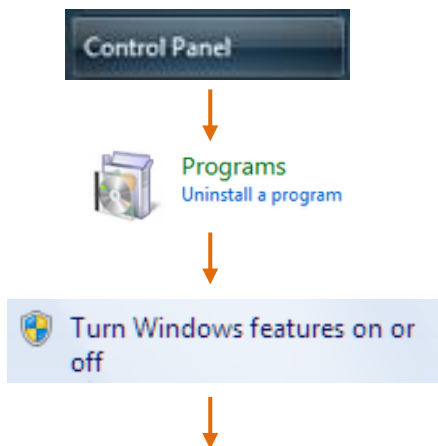

If already enabled, the program appears

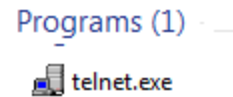

Press ENTER to launch the program.


(Go to step 12 on page 31)

4) Select Control panel



5) Select Programs, followed by Features or Programs and Features

6) Select Turn Windows features on or off

7) Enable Telnet Client and click "OK"

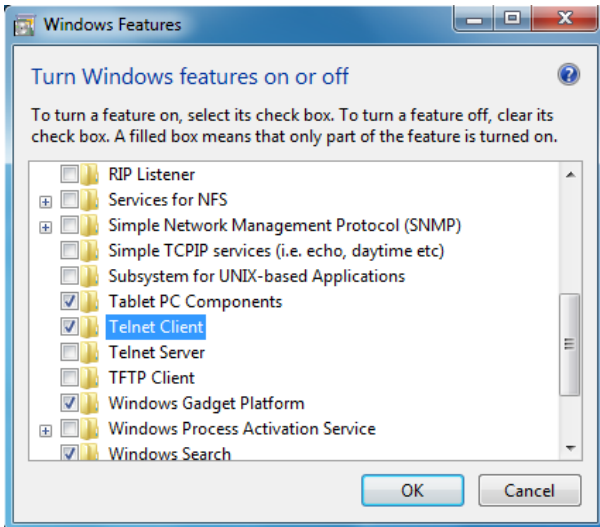

The screen below will open.  
Wait for the Telnet function to activate.

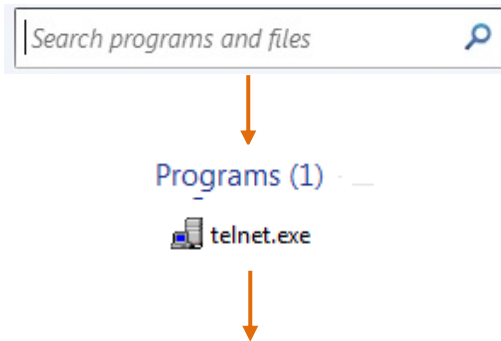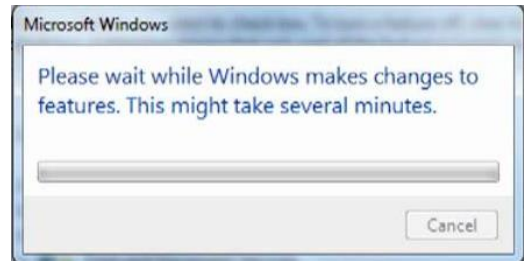


8) Close the open screens and restart the PC if required

9) START menu (Windows)

10) Search for the Telnet program


11) Press ENTER to launch the program

12) TELNET SCREEN

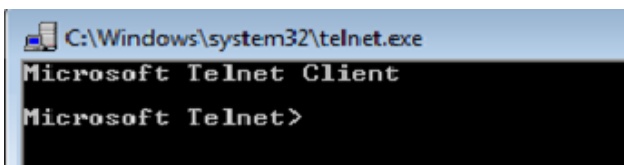


13) Enter: OPEN

14) Press ENTER

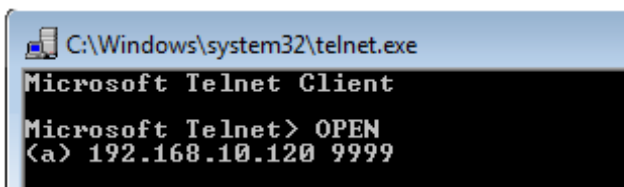

15) Enter: 192.168.10.120 9999

16) Press ENTER

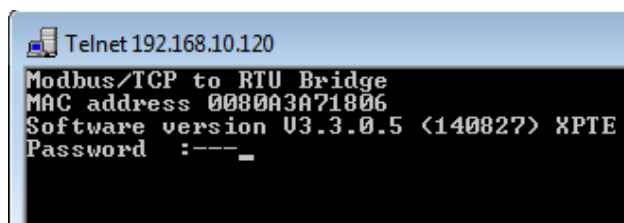

17) Enter the Password: TECS

18) Press ENTER

Note: In this screen we have the MAC address and the software version of the ETH port available.

## 19) IP PARAMETER PROGRAMMING MENU

```
Telnet 192.168.10.120
Modbus/TCP to RTU Bridge
MAC address 0080A3A71806
Software version U3.3.0.5 (140827) XPTC
Password :-----
Press Enter for Setup Mode

Model: Device Server Plus+! (Firmware Code:YM)

Modbus/TCP to RTU Bridge Setup
1) Network/IP Settings:
  IP Address ..... 192.168.10.120
  Default Gateway ..... 192.168.10.1
  Netmask ..... 255.255.255.0
  Telnet config password set
2) Serial & Mode Settings:
  Protocol ..... Modbus/RTU,Slave(s) attached
  Serial Interface ..... 19200,8,E,1,RS485
3) Modem/Configurable Pin Settings:
  CP1 ..... RS485 Output Enable
  CP2 ..... Not Used
  CP3 ..... Not Used
4) Advanced Modbus Protocol settings:
  Slave Addr/Unit Id Source .. Modbus/TCP header
  Modbus Serial Broadcasts ... Disabled (Id=0 auto-mapped to 1)
  MB/TCP Exception Codes .... Yes (return 00AH and 00BH)
  Char, Message Timeout ..... 00050msec, 05000msec
7) Security Settings:
  SNMP ..... Enabled
  SNMP Community Name ..... public
  Telnet Setup ..... Enabled
  TFTP Download ..... Enabled
  Port 77FEh ..... Enabled
  Web Server ..... Enabled
  Enhanced Password ..... Disabled
  Port 77F0h ..... Enabled

D)efault settings, S)ave, Q)uit without save
Select Command or parameter set (1..7) to change: _
```

### IP PARAMETER PROGRAMMING MENU (TELNET)

The TELNET menu allows you to modify the configuration parameters of the Ethernet port.

The information available to you is:

#### Parameters that can be modified by the operator

- 1) Parameter modification (IP Address - Gateway- Netmask -Telnet password).

#### Parameters that cannot be modified by the operator

- 2) Communication parameters between the ETH0 port and the control unit.
- 3) Communication configuration between the ETH0 port and the control unit.
- 4) Communication advanced settings between the ETH0 port and the control unit.
- 7) Security settings between the ETH0 port and the control unit.



#### **IMPORTANT WARNING**

For the device to work correctly, we advise you not to access or modify menus 2-3-4-7. The modification of the values in the stated menus might cause communication anomalies with the loss of the Ethernet IP communication.



## MENU MODIFICATION PROCEDURE 1) IP parameters:

enter the command: 1

```
IP Address: IP Address <192> 192.<168> 168.<010> .<120> 120_
```

1) Enter the desired new IP address, if you wish to keep the set address press ENTER 4 times.

- At the end of the operation, the system will ask if you wish to modify the Gateway IP:

```
IP Address <192> 192.<168> 168.<010> .<120> 120  
Set Gateway IP Address <N> ?
```

Enter: **Y** to modify the Gateway IP.

**N** not to modify the Gateway IP and go to the following step.

2) Enter the desired new Gateway IP address, press ENTER; if you wish to keep the set address press ENTER 4 times.

```
IP Address <192> 192.<168> 168.<010> .<120> 120  
Set Gateway IP Address <N> ? Y  
Gateway IP Address : <192> 192.<168> 168.<010> 10.<001> 001_
```

- At the end of the operation, the system will ask if you wish to modify Netmask:

```
IP Address <192> 192.<168> 168.<010> .<120> 120  
Set Gateway IP Address <N> ? Y  
Gateway IP Address : <192> 192.<168> 168.<010> 10.<001> 001  
Set Netmask <N for default> <N> ?
```

Enter: **Y** to modify Netmask.

**N** not to modify Netmask and go to the following step.

3) Enter the new Netmask, press ENTER; if you wish to keep the set address press ENTER 4 times.

```
IP Address <192> 192.<168> 168.<010> .<120> 120  
Set Gateway IP Address <N> ? Y  
Gateway IP Address : <192> 192.<168> 168.<010> 10.<001> 001  
Set Netmask <N for default> <N> ? Y  
<255> .<255> .<255> .<000> _
```

- At the end of the operation, the system will ask if you wish to modify the Telnet Password:

```
IP Address <192> 192.<168> 168.<010> .<120> 120  
Set Gateway IP Address <N> ? Y  
Gateway IP Address : <192> 192.<168> 168.<010> 10.<001> 001  
Set Netmask <N for default> <N> ? Y  
<255> .<255> .<255> .<000>  
Change telnet config password <N> ? _
```

Enter: **Y** to modify the Telnet Password.

**N** not to modify the Telnet Password and go to the following step.

```

IP Address <192> 192.<168> 168.<010> .<120> 120
Set Gateway IP Address <N> ? Y
Gateway IP Address : <192> 192.<168> 168.<010> 10.<001> 001
Set Netmask <N for default> <N> ? Y
<255> .<255> .<255> .<000>
Change telnet config password <N> ? Y
Enter new Password:

```

4) Enter the new Telnet Password (4 digits max), press ENTER; if you wish to keep the set Password, press ENTER.

```

D>default settings, S>ave, Q>uit without save
Select Command or parameter set <1..7> to change: _

```

Enter: S to save the modified data.  
Q to exit Telnet without saving the data.

The following screen will be displayed:

```

D>default settings, S>ave, Q>uit without save
Select Command or parameter set <1..7> to change:
Parameters saved, Restarting ...

```

To check the programmed parameters or repeat programming, follow the TELNET SCREEN from step 12 to step 19, page 31.

Indications of LEDs 1-2 of the Ethernet port:

- LED 1: Link
- > Off = No link
  - > Amber = 10 Mbps
  - > Green = 100 Mbps
- LED 2: Activity
- > Off = No Activity
  - > Amber = Half Duplex
  - > Green = Full Duplex



## FAIL SAFE FUNCTION

The NT935 IR ETH has n.o selection (contact open ) / n.c (normally closed contact) for ALARM, TRIP and FAULT relays, programming steps 30 to 35 page 20. The selection of the setting YES/NO introduces functions Fail Safe and No Fail Safe.

### ALARM AND TRIP

Setting NO (NO Fail safe) normally open contacts are in positions 5-7 Alarm and 8-10 Trip, they switch only when limits are reached preset temperature.

Setting YES (Fail Safe) normally closed contacts are in positions 5-7 Alarm and 8-10 Trip, they switch only when limits are reached preset temperature or for device's power supply lack.

### FAULT

Setting YES (Fail safe) the contact 11-12 is positioned as normally open, switches (closed) when a fault condition is identified; see section on page 17 alarms and ventilation.

Setting NO (NO Fail safe) the contact 11-12 is positioned as normally closed, switches (open) when a fault condition is identified; see section on page 17 alarms and ventilation.

Disabling the failsafe function on the fault contact the unit will no longer be able to report the fault for lack of power. In this case it is suggested that the enabling of the fail safe on the ALARM contact for the above indication.

NOTE: When the unit is located in one of the methods described below does not monitor heat, also the relay will all be banned, the FAULT led start blinking.

- Vis. display programming.
- PRG programming.
- Test of the relays.

The FAIL SAFE is temporarily disabled The FAULT relay switches

**ATTENTION: accessing at the relay test mode will temporarily disable the failsafe function, the relays with function enabled switch (ALARM-TRIP-FAULT).**

## FCD FUNCTION

The NT series equipment boasts an innovative control function combined with the dynamic status of the TIR409 sensors. Activating the FCD function, the control unit analyses the increase in temperature  $\Delta T$  (\*) recorded in a second (**°C/sec**).

Enabling this function, the user can select a value ( $\Delta T$ ) from a minimum of 1°C/sec to a maximum of 30°C/ sec. If the value detected is higher than the value set by the user, the control unit inhibits the possible activation of the ALARM and TRIP alarms and switches the FAULT relay (11-12), displaying the message "Fcd fault".

Example: if we set the function at 5°C, on the monitored system the FAULT will switch only if the control unit detects an increase in  $\Delta T$  higher than 5°C in a second.

By selecting "NO", the FCD function is disabled.

When a channel is in FAULT for FCD, the relative Alarm and Trip warnings are inhibited on the single channel; therefore only a massive and quick temperature increase is highlighted.

Press Reset to delete the FCD warnings on all channels and reset the FAULT relay.

### Possible FCD applications

#### Identification of a possible induced interference on the TIR409 sensor line.

If the installation instructions are not respected (see page 11), any interference on the TIR409 sensor line can cause false readings or irregular alarms.

Setting the FCD function in a temperature range of between 1°C and 10°C (5°C is the recommended value), the effects caused by false readings can be suppressed and the alarm relay activation can be prevented, as shown above.

Corrective actions: check if the installation of the sensor extension cable is in line with the instructions given in the section "**CONNECTION OF TIR409 SENSORS WITH THE NT935 IR ETH MONITORING UNIT**" on page 11.

#### Identification of a sensor fault or faulty connection

In case of a faulty connection or sensor fault, a quick positive or negative variation in temperature might occur, leading to the system tripping or to the triggering of the alarms of the monitored system.

In this specific case we recommend the FCD function to be set in a temperature range of between 10°C and 20°C.

Corrective actions: check if the terminals where the sensor is connected are tightened and replace the faulty sensor, if required.

#### Identification of the electrical motor rotor block

In case of temperature control of the electrical motors, the quick temperature increase might be due to a blocked rotor.

In this specific case we recommend the FCD function to be set in a temperature range of between 20°C and 30°C. This setting is recommended in order to prevent the FCD function from activating during motor startup, or where the  $\Delta T/sec$  increase varies quickly.

(\*) The  $\Delta T$  value shows the temperature range for each second.

**NOTE: it is recommended not to enable the FCD function with active VOTING.**

## WARRANTY CONDITIONS

The Product purchased is covered by the manufacturer or seller warranty at the terms and conditions set forth in the "Tecsystem s.r.l. General Conditions of Sale", available at [www.tecsystem.it](http://www.tecsystem.it) and / or in the purchase agreement.

The warranty is considered valid only when the product is damaged by causes attributable to TECSYSTEM S.r.l. such as manufacturing or components defects.

The warranty is invalid if the Product proves to have been tampered with / modified or incorrectly connected. The same applies in case of supply voltages outside the limits, non-compliance with the assembly and use data and instruction as described in this instruction manual.

The warranty is always intended EX Corsico (MI) as stated in the "General Conditions of Sale".



### IMPORTANT WARNING

**Before carrying out the isolation test of the electrical panel where it is installed, disconnect the control unit (as well as the sensors) from the power supply to prevent it from being seriously damaged.**

TROUBLESHOOTING	CAUSES AND SOLUTIONS
The control unit does not switch on and the supply to terminals 40-42 is correct.	Check that the connector is correctly inserted into its housing, the wires are tightened, there is no evidence of burning on the connectors. Disconnect the power supply, carry out the above and reconnect.
CH4 is in FAULT condition due to FCC (only 3 TIR409 sensors are connected)	Programming error of the CHn / YES control unit. <i>Check and repeat programming as per page 19-20, select CH4 / NO.</i>
One of the channels is in FAULT conditions due to FCC	Check the connection of the TIR409 sensor as it may be disconnected.
When turning on the display shows "ECH"	A strong disturbance damaged the stored data. See the section "Programmed data diagnostics" on page 18.
All the IR sensors are in FAULT	Wrong IR sensor connections. Terminal board mounted upside down. Check the connections and the terminal board.
The temperature shown by one or more channels is wrong	Contact the TECSYSTEM Technical Department.
Sudden trip of the main switch. The temperature is on standard levels. Only one channel caused the trip.	Check the temperatures recorded in T-MAX, check the instructions given in the paragraphs "Connection of TIR409 sensors" on page 11. Activate the FCD function.
FCD warning	See the FCD function on page 35
Should the problem not be solved, contact <i>TECSYSTEM Technical Department.</i>	

## EQUIPMENT DISPOSAL

European directive 2012/19/EU (WEEE) has been approved to reduce electrical and electronic waste and promote the recycling and reuse of the materials and components of said equipment, cutting down on the disposal of the residues and harmful components of electrical and electronic materials.



All the electrical and electronic equipment supplied after 13 August 2005 is marked with this symbol, pursuant to European directive 2012/19/EU on electrical and electronic waste (WEEE). Any electrical or electronic equipment marked with this symbol must be disposed of separately from normal domestic waste.

Returning used electrical devices: contact TECSYSTEM or your TECSYSTEM agent for information on the correct disposal of the devices.

TECSYSTEM is aware of the impact its products have on the environment and asks its customers active support in the correct and environmentally-friendly disposal of its devices.

## USEFUL CONTACTS

TECHNICAL INFORMATION : [ufficiotecnico@tecsystem.it](mailto:ufficiotecnico@tecsystem.it)

SALES INFORMATION : [info@tecsystem.it](mailto:info@tecsystem.it)

