


Laptop


UESR MANUAL

Note: This manual is for reference only. The specific functions and product images may be slightly different from the actual product. Please refer to the actual product.

3

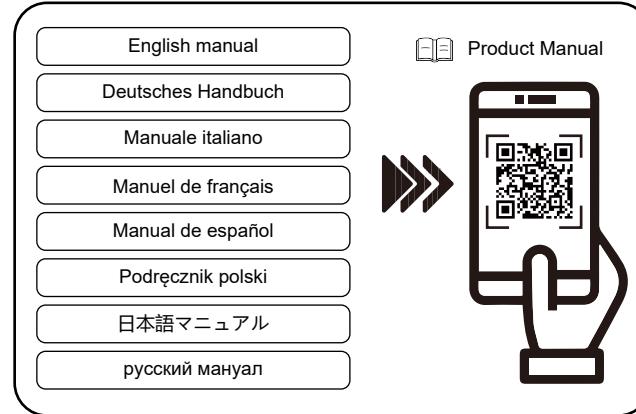

1

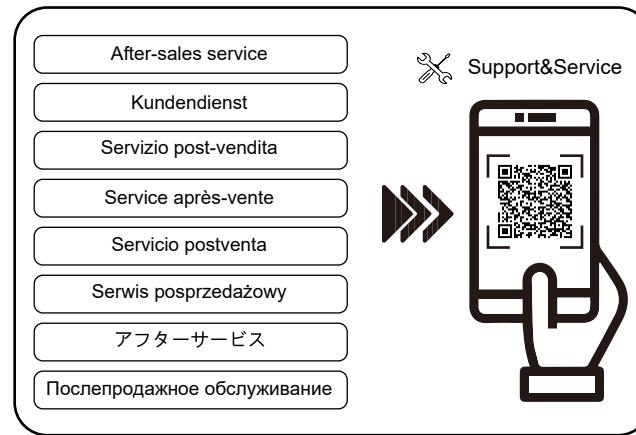

2

Quick Guide

Dear user, before using the machine, please read this user manual carefully so that the machine functions can be used correctly!

Disclaimer

1. Make sure to use the original power brick for charging. The company does not assume any responsibility for any problems or failures caused by any third-party adapters.
2. Users can use music videos, pictures and software provided by the third party, but we do not assume any responsibility for copyright issues or software failures.
3. If the product fails, we will strictly abide by the warranty terms, but we will not be responsible for property damage or economic losses that may be caused during use.
4. The device comes with factory-built-in software and can be used after actual testing. However, if the software is deleted or not deleted when looking for compatibility or other problems, it will not cause any impact on the machine. Please note that this is not a problem of product quality.
5. The company reserves the right to improve the product, and the product specifications and design are subject to change without prior notice! Please refer to the actual product.

2

Attentions

The computer is a precision electronic instrument, please do not disassemble it by yourself.

- Avoid falling and collision.
- Avoid using the device in high or low temperatures, humidity, dust, strong magnetic fields, and prolonged exposure to sunlight.
- Gently wipe the device with a wrung damp cotton cloth and avoid contact with other chemicals.
- This device can not withstand dripping and splashing, and it can not be placed next to, for example, a full cup of liquid.
- Use an appropriate volume to avoid damaging your hearing.
- Please use original batteries, chargers, and other accessories. Using any other type of accessories will violate the warranty and may cause device failure.
- Do not disconnect the device during formatting or ongoing upload and download, otherwise it may cause application errors.
- Dispose of discarded machinery and accessories in accordance with local environmental regulations.
- If you have any questions during the use of the device, please contact your local dealer or contact our customer service center directly.

Operation Guide

The way to turn on the laptop is to press the button, please press the power button to turn it on. Please click "Power Off" in the operating system to turn off the laptop. In special cases, you can forcefully press the power button for a few seconds to shut down the laptop. Customers need to note that frequent forced shutdowns may cause system file loss or laptop crashes.

Common Problem Solving

1. Laptop can not start
 - a. Check if the battery is fully charged.
 - b. Before restarting the machine, please check the power adapter.
 - c. If it still can not start after charging, please contact our dealer.
2. Laptop can not charging
 - a. Make sure the charger is plugged into the charging port, not the headphone jack.
 - b. Check that the charging indicator light next to the charging port is on.
 - c. If it is not, try changing the socket or charging cable. If it still does not light up, please contact customer service.
 - d. If it is on but the charger is not charging, please contact customer service.

4

Thank you for choosing our product!

If you need assistance, please visit the support webpage: <http://umipc.com>

You can easily obtain:

Product information inquiry

Consultation on functional details

After sales support and feedback suggestions

Our professional team will be dedicated to serving you and ensuring a smooth experience.



Scan the QR code to activate warranty or contact us

5