

Introduction

Dear user: Please read this user manual carefully before using this machine to understand the functions of this machine! In order to use it correctly

Disclaimer:

1. Please be sure to use the original power adapter for charging. The company does not assume any responsibility for any problems or failures caused by any third-party adapters.
2. Users can use music, videos, pictures and software provided by third parties, but we do not assume any responsibility for copyright issues or software failures.
3. If the product fails, we will strictly abide by the warranty terms, but we are not responsible for property damage or economic losses that may be caused during use.
4. The device comes with factory-installed software and can be used after actual testing. However, if you delete or do not delete it by yourself when looking for compatibility or other problems, it will not affect the machine. Please note that this is not a product quality issue.
5. The company reserves the right to improve the product.

Specifications and designs are subject to change without prior notice! Please refer to the actual product.

(1) Precautions

The computer is a precision electronic instrument. Please do not disassemble it by

yourself.

Avoid falling and collision.

Avoid using the device in environments with high or low temperatures, humidity, dust, multiple magnetic fields, and long-term direct sunlight.

Gently wipe the device with a wrung damp cotton cloth and avoid contact with other chemicals.

This device is not resistant to dripping and splashing, so do not place it next to a glass filled with liquid.

Please use a suitable volume to avoid damaging your hearing.

Please use original batteries, chargers, and other accessories. Using any other type of accessories will violate the warranty and may cause device failure.


Do not disconnect the device while formatting or uploading and downloading are in progress, otherwise it may cause application errors.

Please dispose of discarded machinery and accessories in accordance with local environmental regulations.

If you have any questions during the use of the device, please contact your local dealer or directly contact our customer service center.

The company reserves the right to improve the product, and the product specifications and design are subject to actual conditions.

(2) Instructions for use

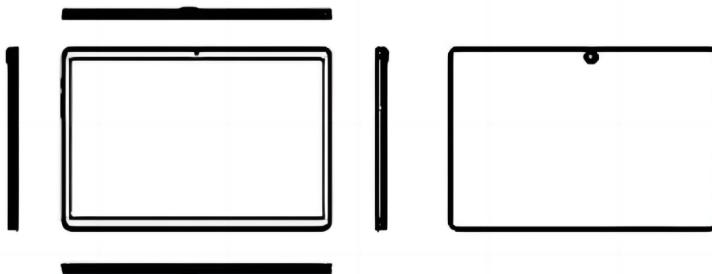

The laptop is powered on by pressing the power button. To power off, click "Shutdown" in the operating system. Forcing the laptop to shut down by pressing the power button for a few seconds can be used in special cases. Customers should note that frequent forced shutdowns may cause system file loss or laptop crashes.

(3). Solutions to common problems

1. The laptop cannot be powered on

- a. Check if the battery is fully charged.
- b. Before powering on again, check the power adapter.
- c. If it still cannot be powered on after charging, please contact our dealer.

2. WIFI does not work

- b. Make sure you are connected to WIFI (enter settings to check)
- a. Please confirm whether there is a WIFI hotspot,
- c. Please confirm the WIFI signal strength and link permissions.

(4). Technical specifications

Model: FunPad

System: Windows

CPU Brand: Intel N100

Screen size: 14"

Screen ratio: 16:10

Resolution: 1920*1200

Network connection: WIFI6 (802.11axl)

Hotspot function: Bluetooth 5.2

M2 interface: 512G M.2 2242

Video format: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4

Other interfaces: TYPE-C 2 Micro HDMI*1

Battery capacity: 38Wh (7.6V/5000mAh)

Charger: Input: AC100-240V, 50-60Hz Output: 12V=3A

Dimensions: 317.38mm x 214.34mm x 10.2mm

Playback format: Audio format: OGG, ACC, M4A, FLAC, AMR, etc.;