


Know the equipment

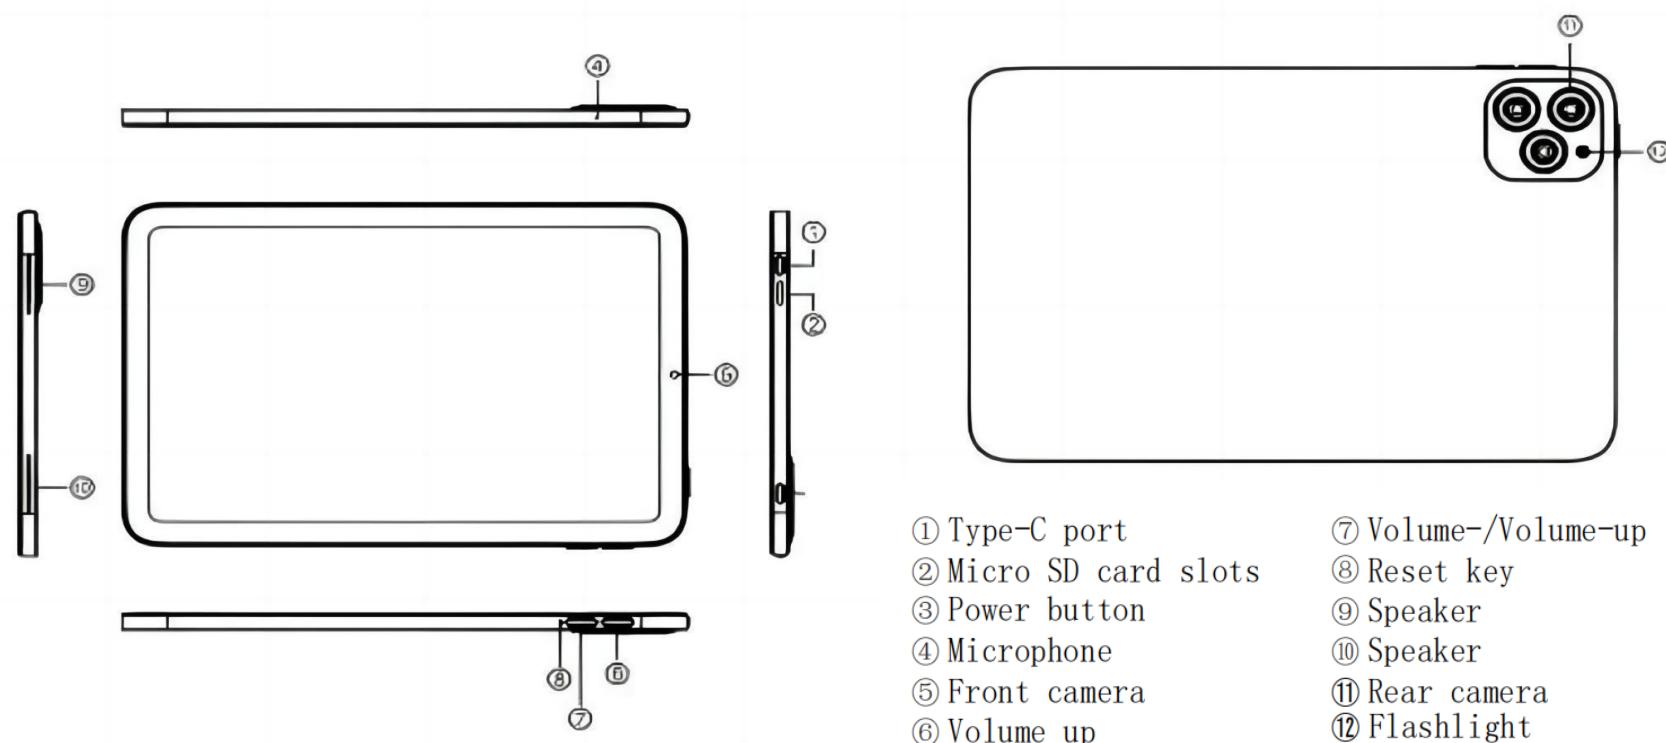

Service Policy

This product strictly abides by the "Microcomputer Product Repair and Return Responsibility Regulations", providing three guarantees service for consumers who purchase FUNYET tablets. For detailed service policy, please refer to: <https://www.funyetstore.com/>

Safety Information

Before using and operating the equipment To ensure optimal performance of the equipment, avoid dangerous or illegal situations, please read and follow all safety information.

System Security Warning

Please upgrade the system through the official after-sales outlets or the system upgrade function of the device. If you use other methods to upgrade the system, which may damage the system safety function, causing security risks. The company does not assume any responsibility for the repairs caused thereby.

NOTE: Accessing network resources can make your device vulnerable to computer viruses, hackers, spyware, and other malicious activities., which could damage your equipment, software or data. You should Make sure your computer is fully protected with firewalls, antivirus software, and antispyware software, and keep these software updated.

Tablet power on/off instructions:

1. Turn on: Press and hold the power button for 3 seconds until the screen turns on and the startup animation appears.
2. Shutdown: When the tablet is turned on, press and hold the power button for 3 seconds, until the shutdown menu appears, and then select Shut down.
3. Forced shutdown: Press and hold the power button for more than 10 seconds to force shutdown.

Operation and safety

To prevent possible hearing damage, do not use high volume for a long time.

Please use this device within the temperature range of 0°C-35°C and store the device and its accessories within the temperature range of -20°C to +45°C. Ambient temperatures that are too high or too low may cause the device to Fault.

Do not expose the device and its battery to high temperatures or near heating devices., such as sunlight, heaters, microwaves, ovens, or water heaters. Overheating of the battery may cause it to explode.

When the device is charging, the power socket should be installed near the equipment, and should be easy to plug and unplug.

When charging is complete or not charging, please disconnect the charger from the device and unplug the charger from the electrical outlet.

Do not use the charger in wet locations, such as near a sink, bathtub, or shower., do not plug or unplug the charger with wet hands

This device uses a non-removable internal battery. Do not replace the battery yourself., so as not to cause device failure or battery damage. For your personal safety and to ensure the normal operation of the product, It is recommended that you go to the official customer service center to replace the battery of this device.

Please dispose of this device, batteries and other accessories in accordance with local regulations., do not dispose of it as household waste. Improper battery disposal may cause the battery to explode.

Do not dispose of batteries in fire, disassembling, dropping, crushing or modifying the battery. Avoid inserting foreign objects into the battery, puncturing the battery, or immersing the battery in water or other liquids to avoid damaging the battery. External shock and pressure to prevent battery leakage, overheating, fire or explosion.

Use of unapproved or incompatible power supplies, chargers, or batteries may present a risk of fire, explosion, or other hazard.

Use only accessories approved by the device manufacturer and compatible with this device. If you use other types of accessories, may violate the warranty terms of this device and the country/region where the device is located. Related regulations, and may cause safety accidents. To obtain approved accessories, please contact the official customer service center.

The radio waves generated by this device may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers, cochlear implants, hearing aids, etc. If you use these Medical Devices, please consult its manufacturer for the limitations of use of this device.

When using this device Please keep at least 15 cm away from implanted medical devices (such as pacemakers, cochlear implants, etc.). Use unauthorized third-party software to upgrade device firmware and system, which may cause security risks such as the device being unusable or leaking your personal information. It is recommended that you use online upgrades or send the device to an official customer service center near you for upgrades.

To prevent data loss It is recommended that you back up your device in time during daily use, before upgrading the device, or before sending it for repair.