
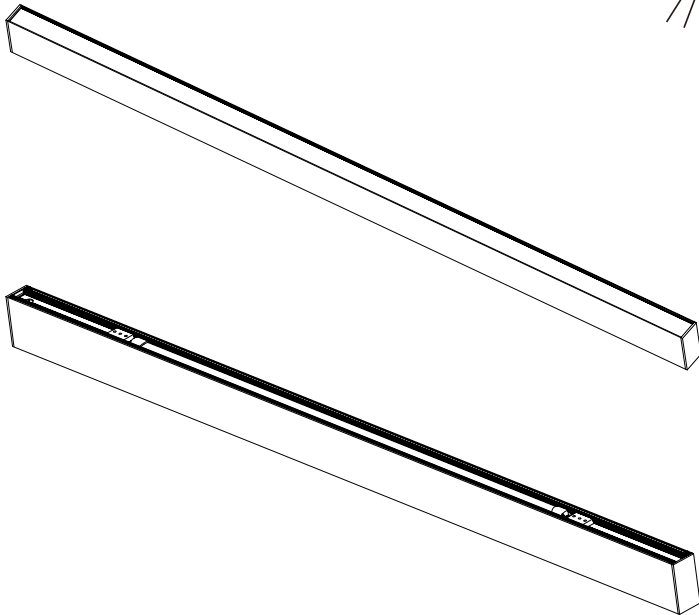


Premline Mounting Instructions for 3570


1. Terminal block not included. Installation must be performed by a qualified person.
2. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
3. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
4. For models with dimmable LED drivers,
 - Reinforced insulation was maintained between LV circuit and output circuit;
 - Supplementary insulation was maintained between output circuit and DALI circuits (FELV).
 - Basic insulation was maintained between LV circuit and DALI circuits (FELV).
5. Luminaires not suitable for covering with thermally insulating material.
6. The luminaire must be installed by qualified electrician in accordance with local rules and codes.

Luminaires not suitable for covering with thermally insulating material...

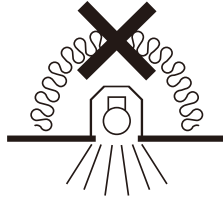


Cord pendant mounting(without junction box)


1. Determine the distance of two pendant mounting point (according to need) and position of input cord mounting, then drill out.
Suggest 830mm distance for 1.2m linear, 1130mm for 1.5m, 2630mm for 3m, as following photo.

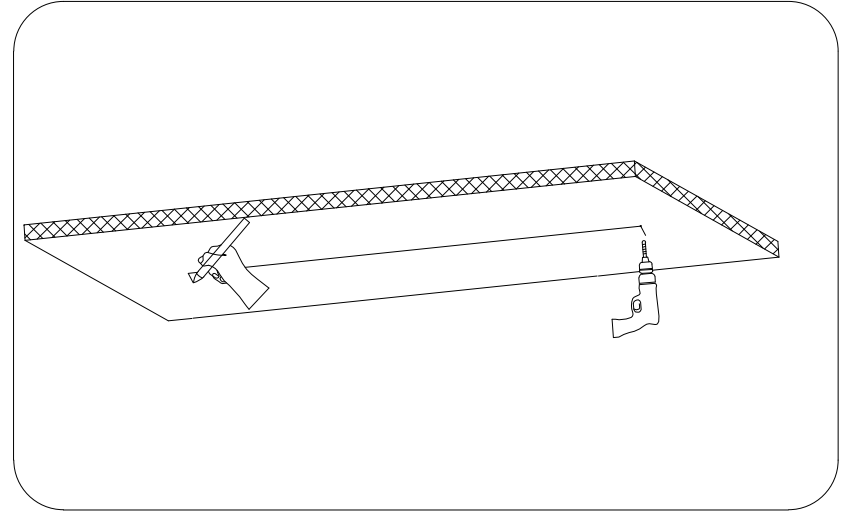


2. Put the nail drill into the hole, fasten the steel part A with screws.

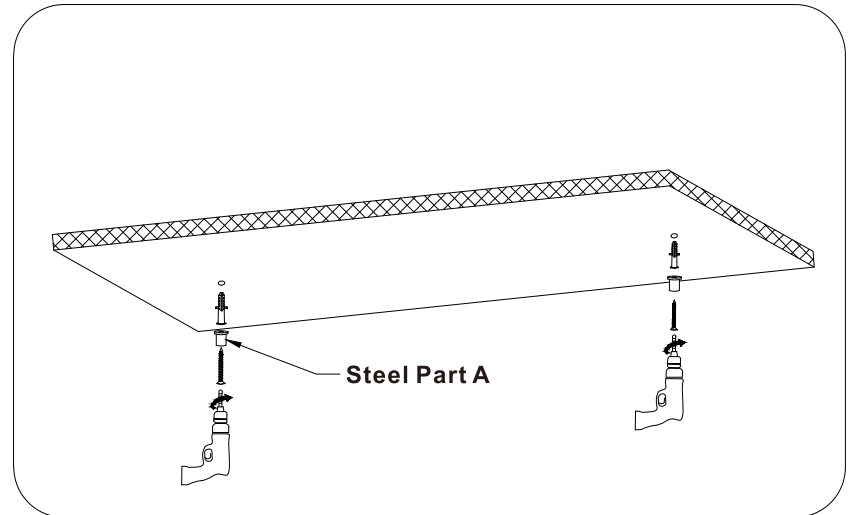


3. Connect steel part A with steel part B

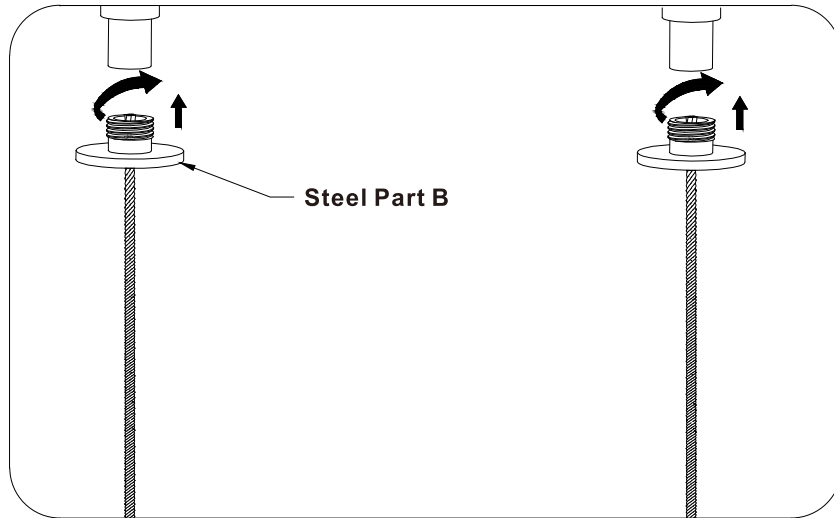

4. Connect the input line in the correct wiring way, as following photo.

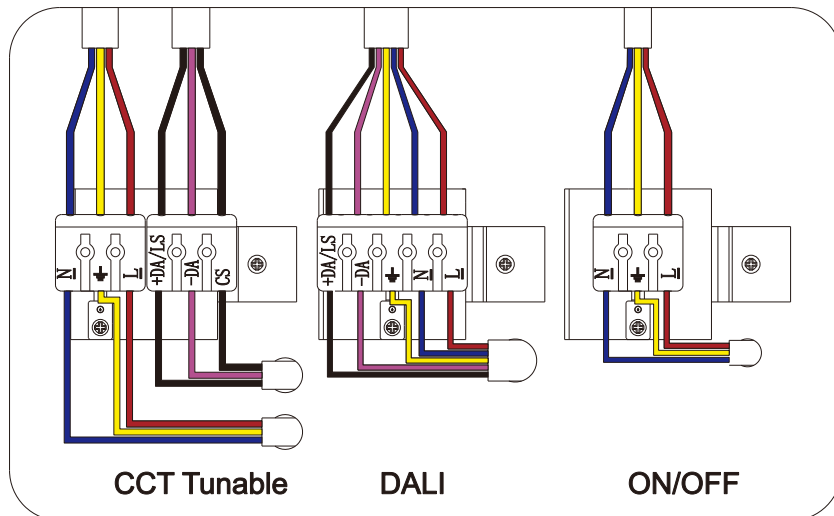

5. Screw the threader into the hanger, as following photo.

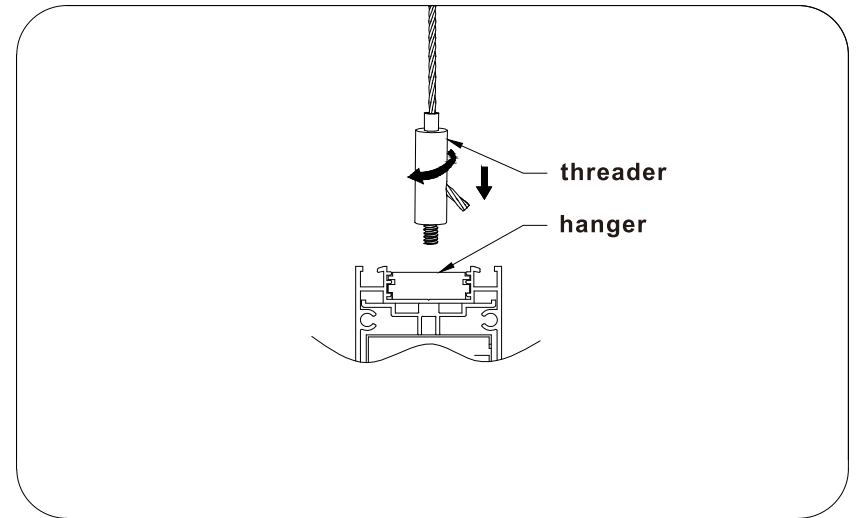

6. Adjust rope according to demand, keep the fixture on balance, then installation finishes.

