
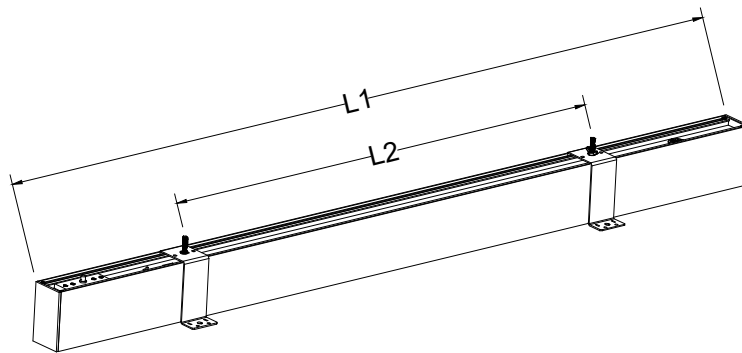
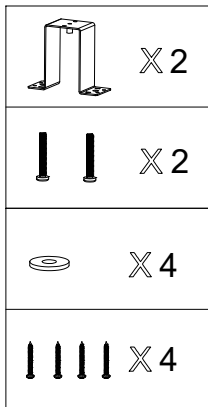


NECO P Recessed Mounting Instruction


1. Terminal block not included. Installation must be performed by a qualified person.
2. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
3. if the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
4. For models with dimmable LED drivers,
 - Reinforced insulation was maintained between LV circuit and output circuit;
 - Supplementary insulation was maintained between output circuit and DALI circuits (FELV).
 - Basic insulation was maintained between LV circuit and DALI circuits (FELV).
5. Luminaires not suitable for covering with thermally insulating material.
6. The luminaire must be installed by qualified electrician in accordance with local rules and codes.

Luminaires not suitable for covering with thermally insulating material...

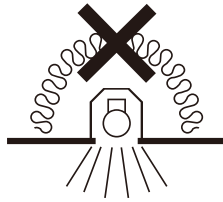


Item	L1	L2
1.2M	1126mm	500mm
1.5M	1446mm	760mm


1. Recessed installation Slot width (W): 50-55mm, length (L): (lamp length L1+8) mm

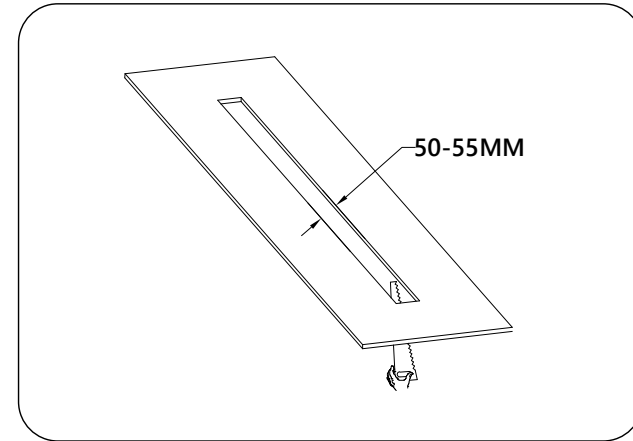


2. Remove the direct light and install the recessed fitting

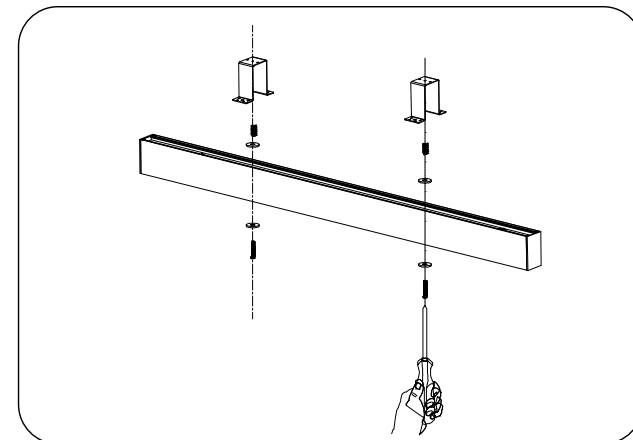


3.Connect the AC cable and install the light in the plasterboard

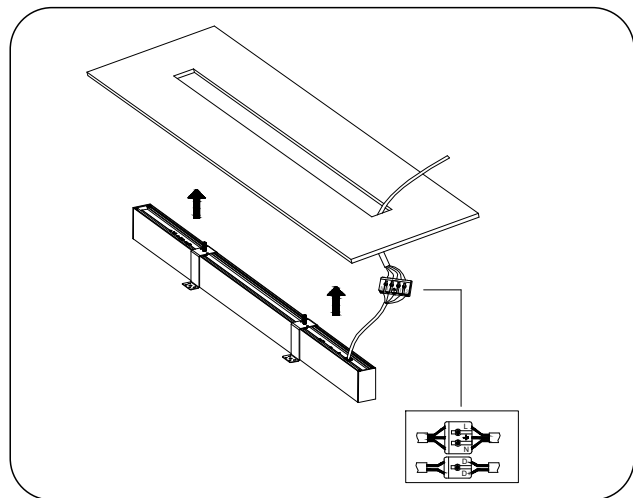

5.Connect the direct light

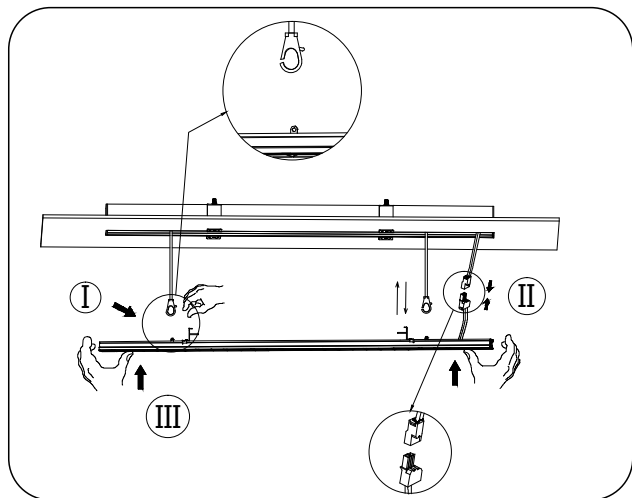

4.Fixing screws

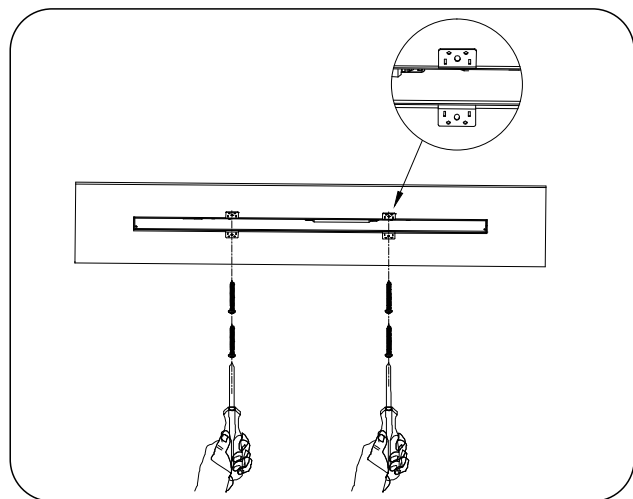

6.Brush with the white putty

